




ITEM NO: ICB-463-BCH/BLK/EGG/GRY Chesser Mirror


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

Option 1: Wall Mount

A (Portrait)

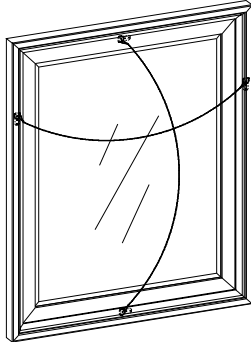


B (Landscape)

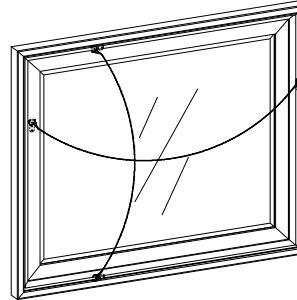


ICB-463

Option 2: Dresser/Chesser Mount

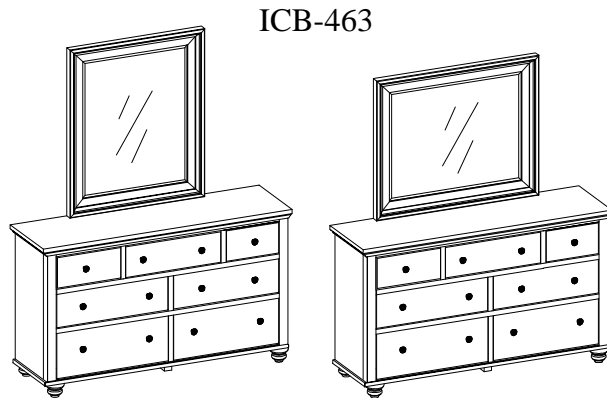

ICB-463

ICB-454

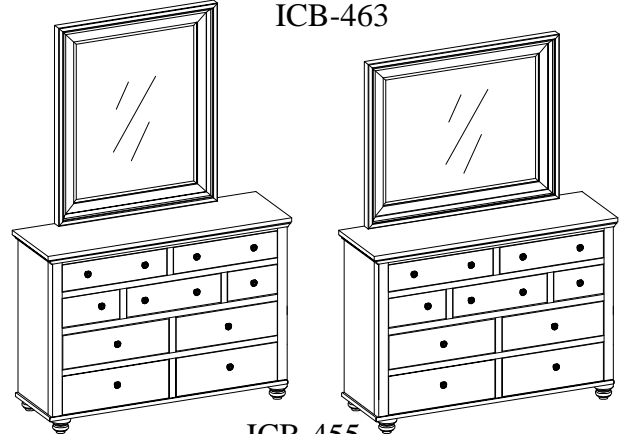

ICB-463

ICB-455

HARDWARE LIST:

No.	Description	Sketch	Quantity
A	Bolt Ø1/4"*1-1/4"		8 PCS
B	Lock Washer Ø1/4"		8 PCS
C	Flat Washer Ø1/4" *3/4"		8 PCS
D	Allen Wrench 4mm		1 PC

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

COMPONENTS LIST:

No.	Description	Sketch	Quantity
1	Mirror		1 PC
2	Wood Strip		2 PCS

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY





ITEM NO: ICB-463-BCH/BLK/EGG/GRY Chesser Mirror

FOR OPTION 1 (Wall Mount)

STEP 1: The mirror is pre-assembled with the wire in position to hang the mirror in landscape orientation as shown in Diagram B. If you refer to hang the mirror in portrait orientation, remove the wire using a screwdriver (not included) and attach the wire as shown in Diagram A.

STEP 2: After attaching nail/hanger to wall, place wire over nail/hanger and slowly lower the mirror into place. Make sure the wire catches on the nail/hanger.


Note: Ensure the nail/hanger is in a wall stud or wall solid enough to support mirror.

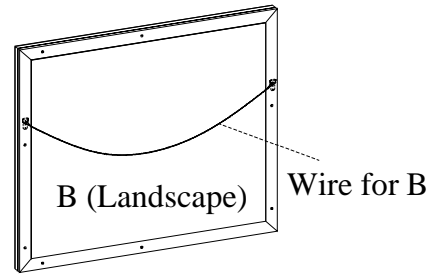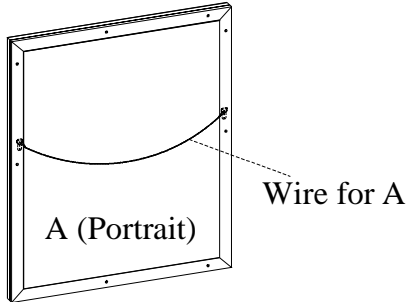

FOR OPTION 2 (Dresser/Chesser Mount)

STEP 1: Attach the wood strips to the dresser by using 4 bolts(A), lock washers(B), and flat washers(C). Do not tighten bolts completely.

Note: Use inside threaded inserts for position A (portrait) and outside threaded inserts for position B (landscape).

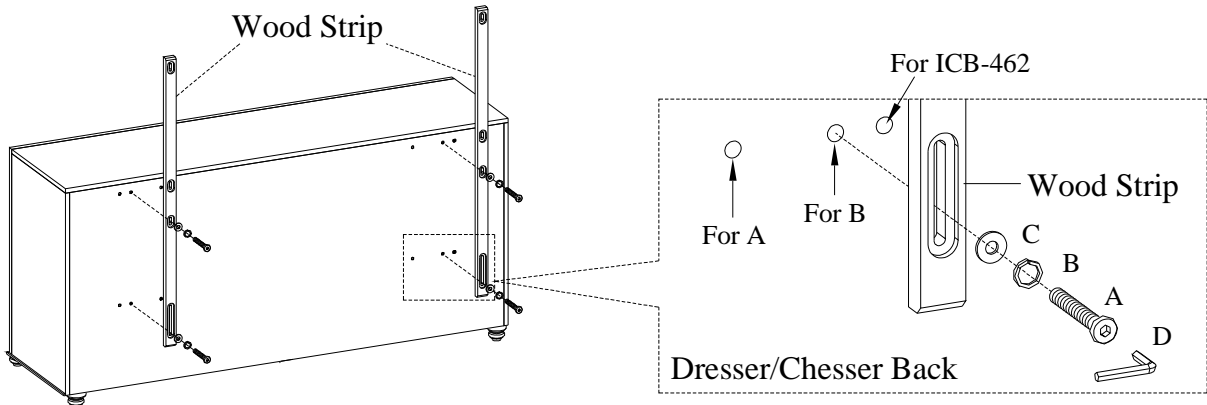

STEP 2: Attach the wood strips to the mirror by using 4 bolts(A), lock washers(B), and flat washers(C). Tighten all bolts on dresser and mirror with Allen wrench.

