


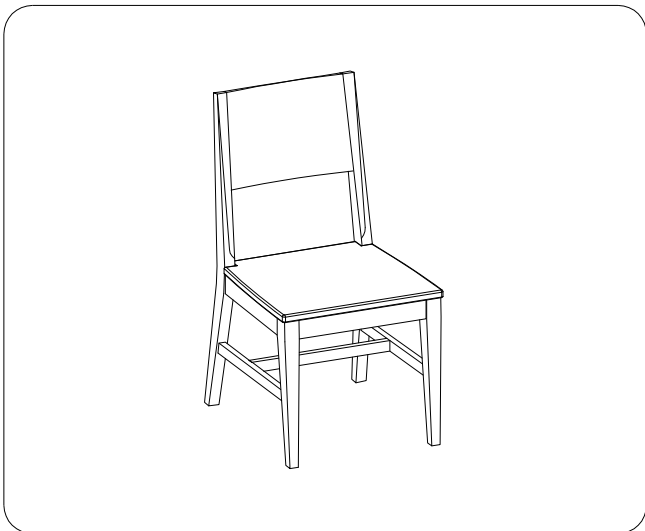

ITEM NO: I644-6640S Dining Side Chair w/ Wood Seat (2/Ctn)








Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.








TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER 


HARDWARE LIST:

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 3-1/4"		4 PCS
B	Bolt Ø5/16" x 2"		4 PCS
C	Bolt Ø5/16" x 1-3/4"		2 PCS
D	Lock Washer Ø5/16"		10 PCS
E	Flat Washer Ø5/16" x 3/4"		10 PCS
F	Allen Wrench 4mm		1 PC
G	Wood Screw #4 x 1-1/2"		4 PCS

COMPONENTS LIST:

No.	Description	Sketch	Quantity
1	Chair Back		1 PC
2	Chair Seat		1 PC
3	Left Front Leg		1 PC
4	Right Front Leg		1 PC
5	"H" Stretcher		1 PC

FUNCTIONALITY INSTRUCTION

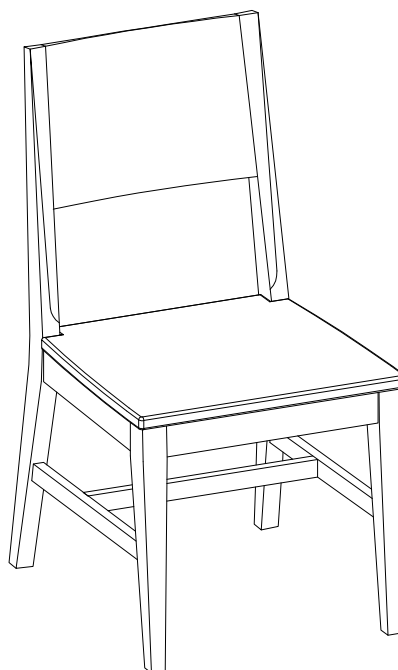

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.


Save these instructions for future reference.

FOR INDOOR USE ONLY





ITEM NO: I644-6640S Dining Side Chair w/ Wood Seat (2/Ctn)

STEP 1: Attach the left front leg and right front leg to chair seat by using 4 bolts (B), lock washers (D) and flat washers (E), Do not completely tighten bolts.

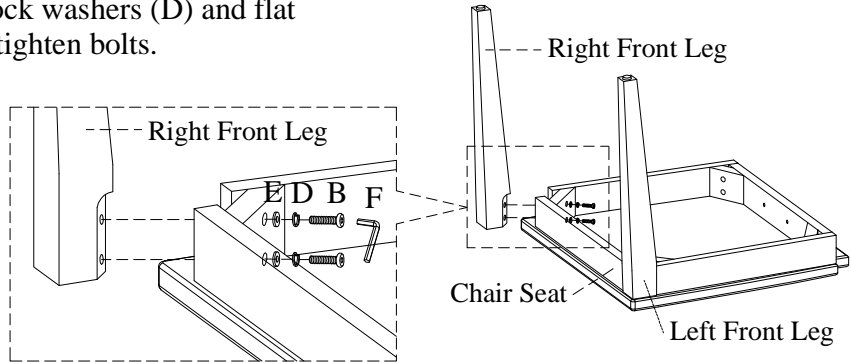

STEP 2: Attach the chair seat to chair back by using 4 bolts (A), 2 bolts (C), 6 lock washers (D), 6 flat washers (E). Do not completely tighten bolts.

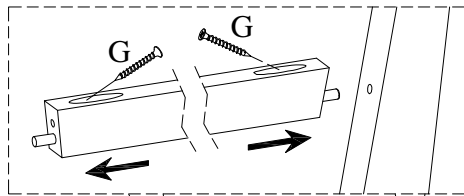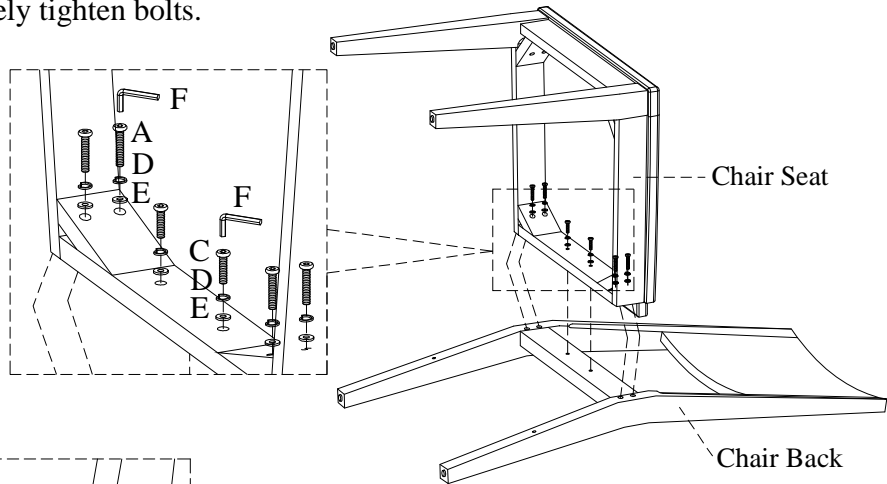

STEP 3: Attach the "H" stretcher to the front legs and chair back with wood screws (G). Completely tighten all wood screws and bolts. Turn the assembled chair to the upright position.

