ITEM NO: I07-339-PEP/WBR Mod Open Base

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.

Save these instructions for future reference.


T	TOOLS REQUIRED (NOT PROVIDED)		
P	PHILLIPS SCREWDRIVER		
COMPONENTS LIST:			
No.	Description	Sketch	Quantity
1	Case		1 PC
2	Bun Foot	٥	4 PCS

STEP 1: Put the case upside down on a soft surface and attach the bun feet to the bottom. Return the case to the upright position.

Leveler Bun Foot

Case Bottom

FUNCTIONALITY INSTRUCTION

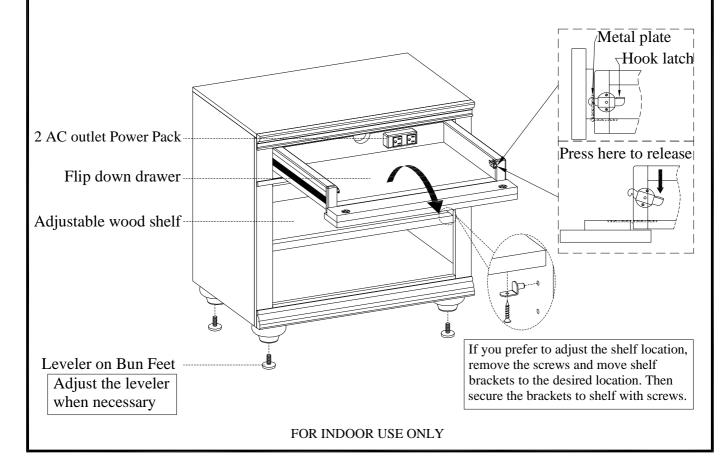

ITEM NO: I07-341-PEP/WBR Mod File Base

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.


Save these instructions for future reference.

TOOLS REQUIRED (NOT PROVIDED)			
PHILLIPS SCREWDRIVER			
COMPONENTS LIST:			
No.	Description	Sketch	Quantity
1	Case		1 PC
2	Bun Foot		4 PCS

STEP 1: Put the case upside down on a soft surface and attach the bun feet to the bottom. Return the case to the upright position.


FUNCTIONALITY INSTRUCTION



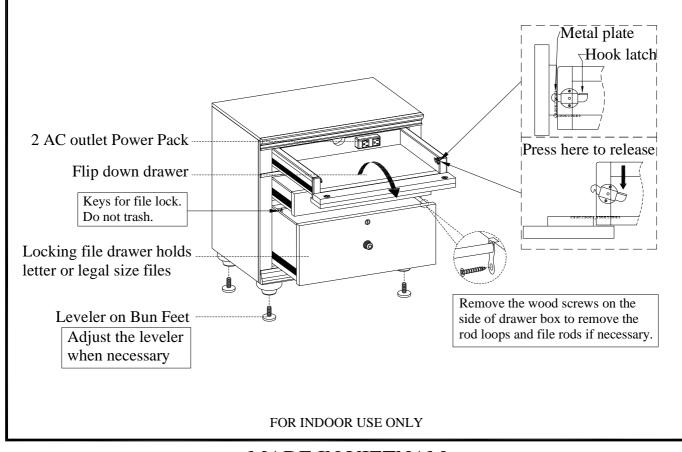


ITEM NO: I07-344-PEP/WBR 72" Writing Desk

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

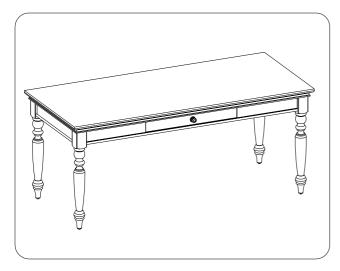

Т	TOOLS REQUIRED (NOT PROVIDED)			
P	PHILLIPS SCREWDRIVER			
COM	COMPONENTS LIST:			
No.	Description	Sketch	Quantity	
1	Desk Top		1 PC	
2	Leg		4 PCS	
HAR	HARDWARE LIST:			
No.	Description	Sketch	Quantity	
A	Bolt Ø5/16"*2-1/4"	9	8 PCS	
В	Lock Washer Ø5/16"		8 PCS	
С	Flat Washer Ø5/16" *3/4"	9	8 PCS	
D	Allen Wrench 5mm		1 PC	

<u>STEP 1:</u> Put the desk upside down on a soft surface and attach the legs to the desk using 8 bolts(A), lock washers(B) and flat washers(C). Return the desk to the upright position.

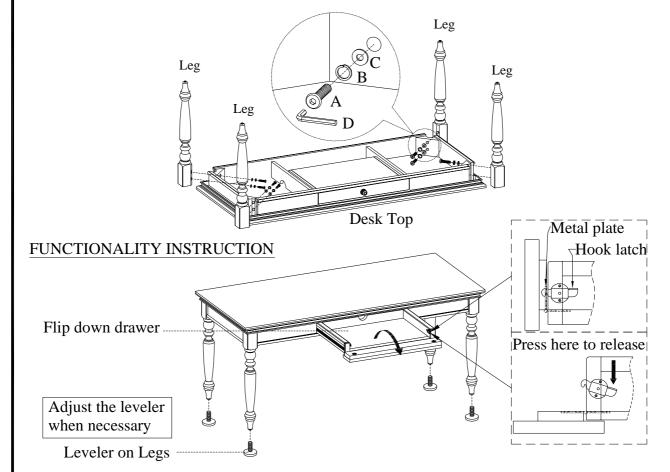

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I07-385DC-PEP/WBR Mod Center Hutch w/ Door

I07-385L-PEP/WBR Mod LF Open Hutch I07-385R-PEP/WBR Mod RF Open Hutch

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

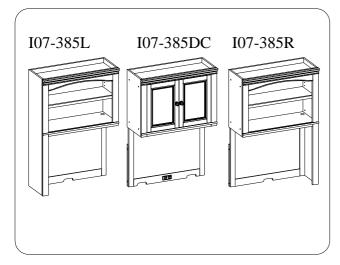

HARDWARE LIST: I07-385DC			
No.	Description	Sketch	Quantity
A	Bolt Ø1/4"*1-9/16"	9	8 PCS
В	Lock Washer Ø1/4"		8 PCS
С	Flat Washer Ø1/4" *3/4"	0	8 PCS
D	Allen Wrench 4mm		1 PC

HARDWARE LIST: I07-385L/385R			
No.	Description	Sketch	Quantity
Е	Bolt Ø1/4"*1-1/4"	0	4 PCS
F	Hex Nut Ø1/4"*1/2"	(a)	4 PCS
G	Allen Wrench 4mm		1 PC
Н	Wood Screw M4*1"	Ømmmm>	2 PCS

TOOLS REQUIRED (NOT PROVIDED)	
PHILLIPS SCREWDRIVER	

COMPONENTS LIST: 107-385DC			
No.	Description	Sketch	Quantity
1	Case		1 PC
2	Back Panel		1 PC


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I07-385DC-PEP/WBR I07-385L-PEP/WBR I07-385R-PEP/WBR Mod Center Hutch w/ Door Mod LF Open Hutch Mod RF Open Hutch


<u>STEP 1:</u> Put the case of center hutch upside down on a soft surface, Attach the back panel to the case by using 4 bolts(A), lock washers(B) and flat washers(C).

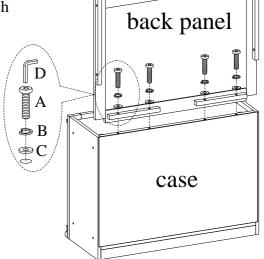

<u>STEP 2:</u> Attach the left hutch and right hutch to the center hutch by using 4 bolts(A), lock washers(B) flat washers(C) 8 bolts(E) and hex nut(F).

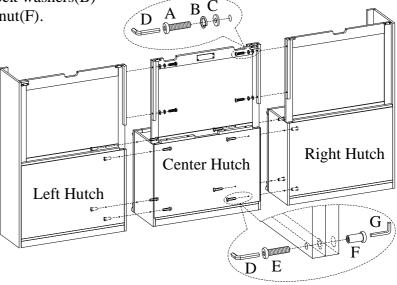

STEP 1: Return the assembled hutch to the right side up position with screw(H).

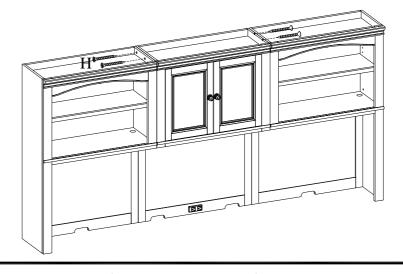



ITEM NO: I07-385DC-PEP/WBR Mod Center Hutch w/ Door

I07-385L-PEP/WBR Mod LF Open Hutch I07-385R-PEP/WBR Mod RF Open Hutch

<u>STEP 3:</u> Put the assembled hutch on the assembly desk. Take off one screw from each metal plate on the back of hutch and swing it in an ideal place. Then re-secure the metal plate with screw to assembly desk.

