


aspenhom

#### ITEM NO: I287-371 Open Ped Desk

ah


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

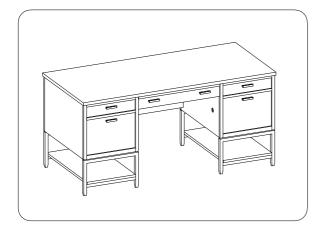

### TOOLS REQUIRED (NOT PROVIDED) PHILLIPS SCREWDRIVER

HARDWARE LIST:			
No.	Description	Sketch	Quantity
Α	Allen Wrench		1 PC

### FUNCTIONALITY INSTRUCTION

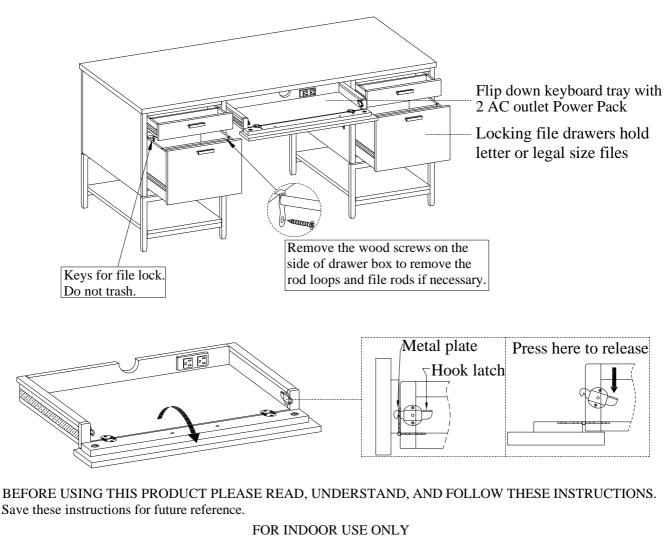

MADE IN VIETNAM


ah

aspenhome

# ASSEMBLY INSTRUCTIONS

Distributed by Furniture Values International, LLC


# ITEM NO: I287-371 Open Ped Desk

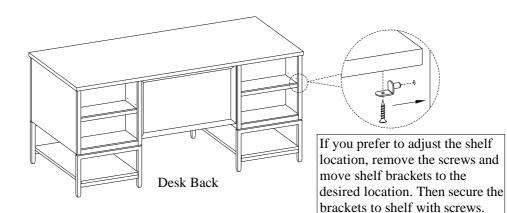

## To dis-assemble desk (If necessary):

<u>STEP 1:</u> Put the case upside down on a soft surface.

STEP 2: Remove bolts, lock washers and flat washers from the metal base assemblies.

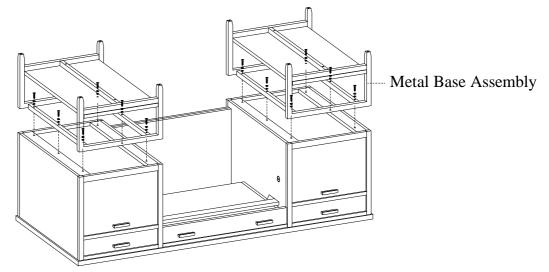

Notes: To reassemble desk, replace bolts removed in STEP 2 above before proceeding to STEP 3 below. Tighten all of the bolts completely.

STEP 3: Turn the assembled desk to the upright position.

