
ASSEMBLY INSTRUCTIONS

ITEM NO: I356-6808-BRB Sideboard

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

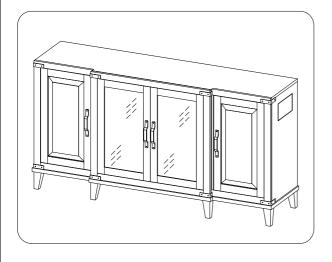


TOOLS REQUIRED (NOT PROVIDED) PHILLIPS SCREWDRIVER


HARDWARE LIST:				
No.	Description	Sketch	Quantity	
A	JCBC Bolt M6 x 1-3/4"	0	12 PCS	
В	Spring Washer 1/4"		12 PCS	
C	Flat Washer 1/4" x 3/4"	9	12 PCS	
D	Allen Key M4		1 PC	

COMPONENTS LIST:

No.	Description	Sketch	Quantity	
1	Case		1 PC	
2	Leg		6 PCS	
3	Support Leg	0 •	2 PCS	

<u>STEP 1:</u> Put the case upside down on a soft surface, attach the legs and support legs to the bottom of case by using 12 bolts(A), spring washers(B) and flat washers(C). Completely tighten all the bolts. Return the case to the upright position.

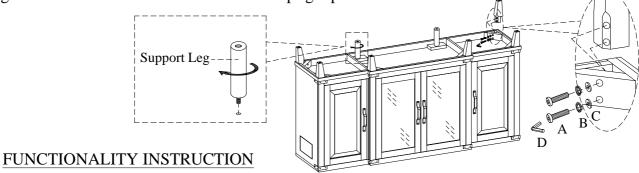

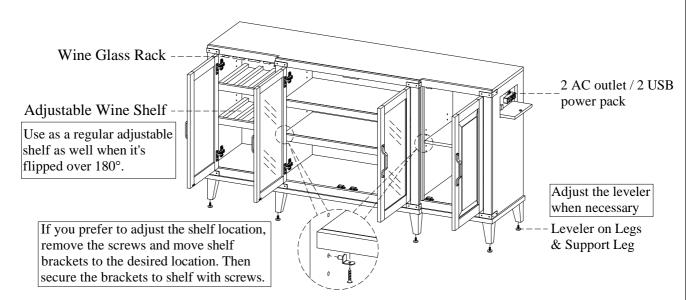

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY