


ITEM NO: I631-239 Pier Base

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

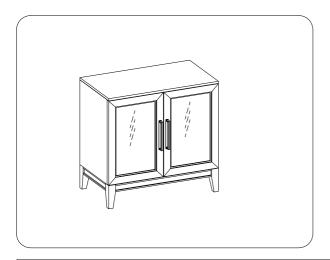


TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST:			
No.	Description	Sketch	Quantity
Α	Hex Bolt Ø1/4" x 2"	<u>Gamman</u>	8 PCS
В	Lock Washer Ø1/4"		8 PCS
C	Flat Washer Ø1/4" x 3/4"	9	8 PCS
D	Allen Wrench 4mm		1 PC

COMPONENTS LIST:			
No.	Description	Sketch	Quantity
1	Case		1 PC
2	Leg		4 PCS


FUNCTIONALITY INSTRUCTION

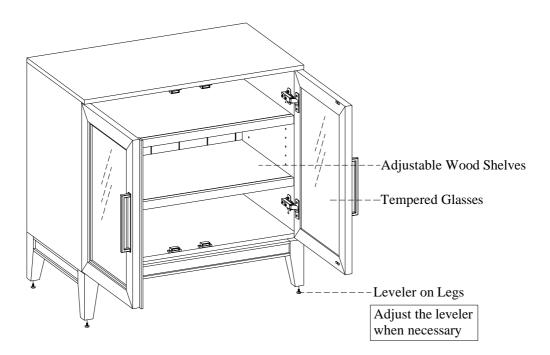


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

ITEM NO: I631-239 Pier Base

<u>STEP 1:</u> Lay the case face down on a soft surface. Attach the legs to case by using 8 bolts(A), lock washers(B), flat washers(C). Completely tighten all bolts. Turn the assembled base to the upright position.

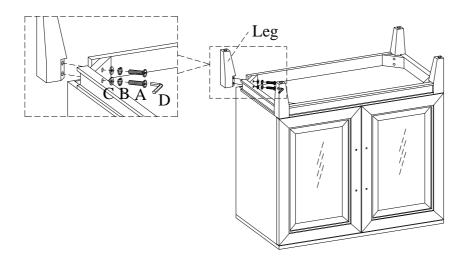


<u>STEP 2:</u> Reverse each handle by removing the screws while each door is open and attach all handles to the front of the doors with screws as shown below.

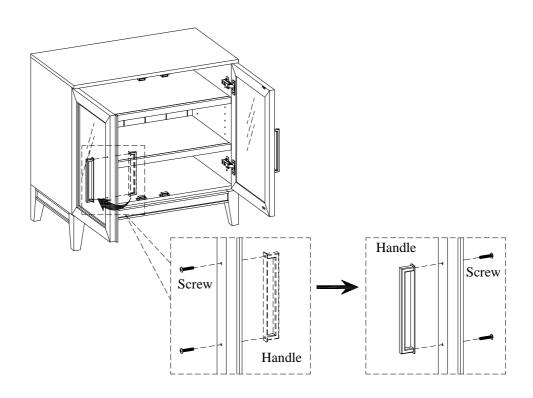

ITEM NO: I631-272 72" Console


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

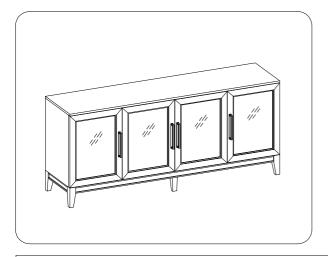

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST:			
No.	Description	Sketch	Quantity
Α	Hex Bolt Ø1/4" x 2"	<u>Gumman</u>	8 PCS
В	Hex Bolt Ø1/4" x 1-1/2"	(d)mmmo	2 PCS
C	Lock Washer Ø1/4"		10 PCS
D	Flat Washer Ø1/4" x 3/4"	9	10 PCS
Е	Allen Wrench 4mm		1 PC


COMPONENTS LIST:			
No.	Description	Sketch	Quantity
1	Case		1 PC
2	Side Leg		4 PCS
3	Central Leg		1 PC
4	Support Leg	0←	1 PC
	•		

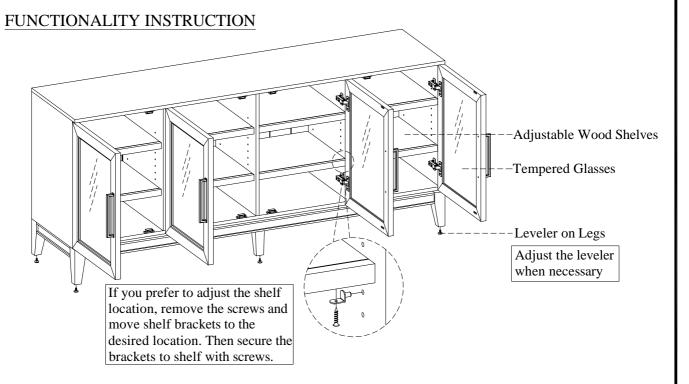


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

ITEM NO: I631-272 72" Console

STEP 1: Lay the case face down on a soft surface. Attach the side legs and central leg to case by using 8 bolts(A), 2 bolts(B), 10 lock washers(C), 10 flat washers(D). Completely tighten all bolts. Install the support leg as well. Once legs are all secure, turn the assembled console to the upright position.

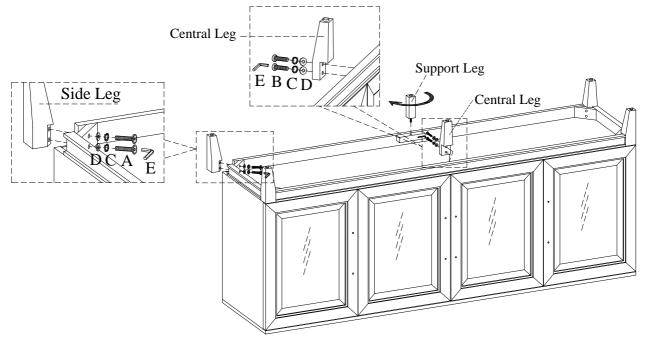


<u>STEP 2:</u> Reverse each handle by removing the screws while each door is open and attach all handles to the front of the doors with screws as shown below.

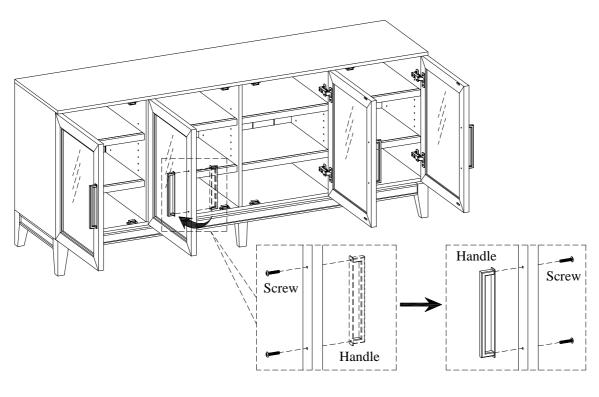



ITEM NO: I631-272H 72" Bridge & Back Panel

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

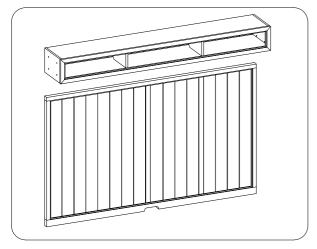


TOOLS REQUIRED (NOT PROVIDED)		
PHILLIPS SCREWDRIVER		

CON	COMPONENTS LIST:			
No.	Description	Sketch	Quantity	
1	Bridge		1 PC	
2	Back Panel Left		1 PC	
3	Back Panel Right		1 PC	
4	Top Strip		1 PC	
5	Bottom Strip		1 PC	

HARDWARE LIST:			
No.	Description	Sketch	Quantity
A	Hex Bolt Ø1/4" x 7/8"		20 PCS
В	Hex Bolt Ø1/4" x 1-1/2"	9	2 PCS
C	Lock Washer Ø1/4"		22 PCS
D	Flat Washer Ø1/4" x 3/4"	0	22 PCS
Е	Allen Wrench 4mm		2 PCS
F	Metal Plate	0	6 PCS
G	Female Bolt Ø1/4"x13/16"		10 PCS
Н	Wood Screw #4 x 1-3/16"	Ommun-	8 PCS


FUNCTIONALITY INSTRUCTION

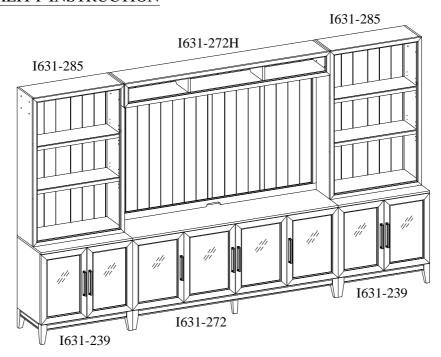


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

ITEM NO: I631-272H 72" Bridge & Back Panel

<u>STEP 1:</u> Assemble the back panel(left) to back panel(right) by using 2 bolts(B), lock washers(C), flat washers(D), and female bolts(G) with 2 allen wrench(E) as shown below. Do not completely tighten bolts.

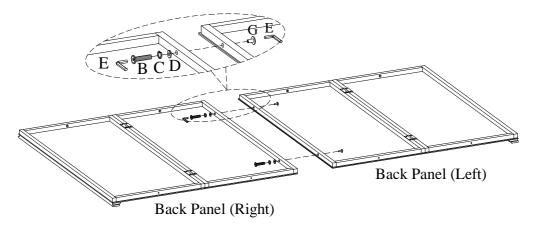


<u>STEP 2:</u> Attach the top strip and bottom strip to back panel assembly by using 8 wood screws(H) as shown below.

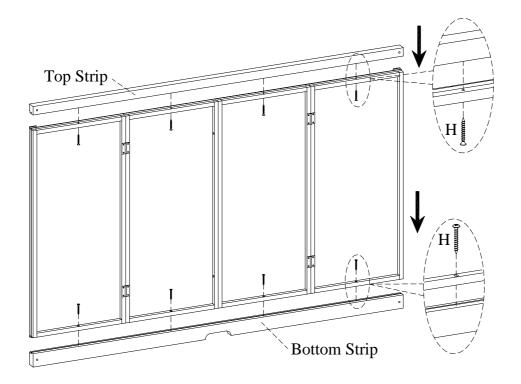


ITEM NO: I631-272H 72" Bridge & Back Panel

<u>STEP 3:</u> Place the back panel assembly on the console by using 4 bolts(A), lock washers(C), flat washers(D) with 2 metal plates(F) as shown below. Do not completely tighten bolts.

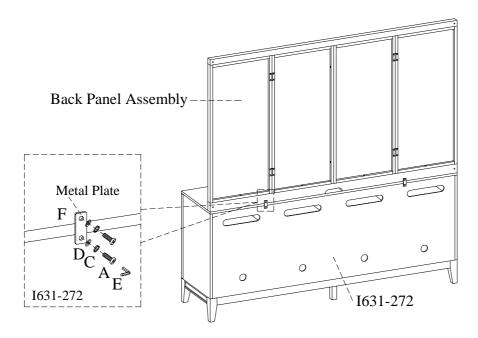


<u>STEP 4:</u> Attach the side assemblies to the console/back panel assembly by using 8 bolts(A), lock washers(C), flat washers(D) with 4 metal plates(F) as shown below. Do not completely tighten bolts.

Note: The side assemblies where please refer to the assembly instruction(I631-285).

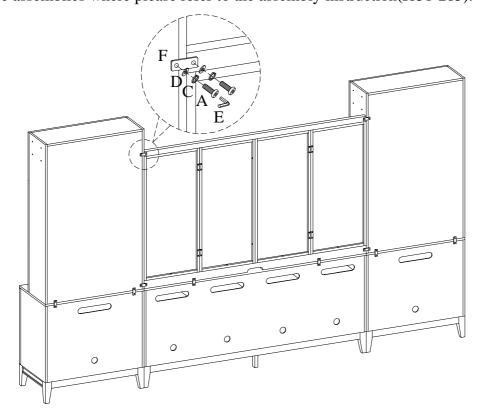


ITEM NO: I631-272H 72" Bridge & Back Panel

<u>STEP 5:</u> Attach the bridge to hutches by using 8 bolts(A), lock washers(C), flat washers(D) and female bolts(G) with 2 allen wrenchs(E) as shown below. Completely tighten all bolts.

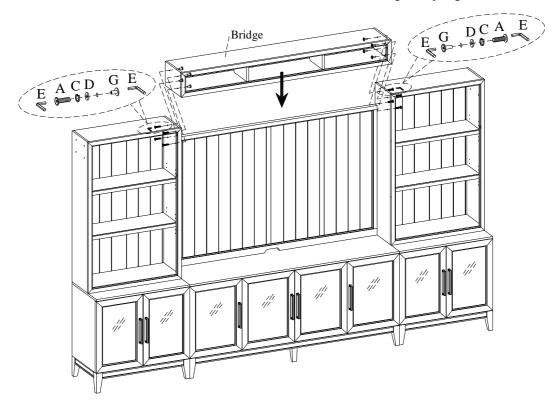


<u>STEP 6:</u> When the combination is complete, insert plastic plugs("F" on the hardware bag of the pier hutch) into the holes on both side panels as shown below.

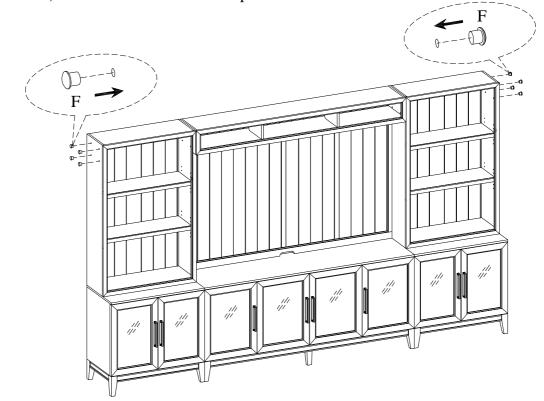

ITEM NO: I631-285 Pier Hutch

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

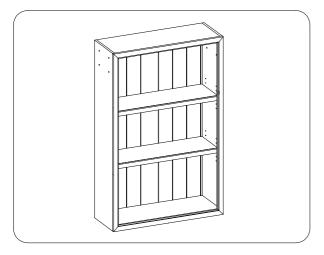


TOOLS REQUIRED (NOT PROVIDED) PHILLIPS SCREWDRIVER

HARDWARE LIST:			
No.	Description	Sketch	Quantity
Α	Metal Plate	00	2 PCS
В	Hex Bolt Ø1/4" x 7/8"	0	4 PCS
С	Lock Washer Ø1/4"		4 PCS
D	Flat Washer Ø1/4" x 3/4"	9	4 PCS
Е	Allen Wrench 4mm		1 PC
F	Plastic Plug	0	8 PCS

<u>STEP 1:</u> Place the hutch on the base by using 4 bolts(B), lock washers(C), flat washers(D) with 2 metal plates(A) as shown below. Completely tighten all bolts.

STEP 2: When this base is used alone, insert plastic plugs (F) into the holes on both side panels as shown below.

Note: Please follow the group assembly instruction when this base is combined with the bridge & back panel (I631-272H).

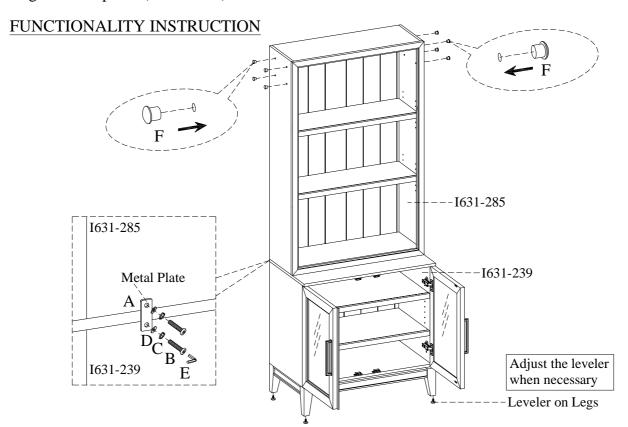

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.