


Distributed by Furniture Values International, LLC

ITEM NO: I218-465F-WHT/SHL Floor Mirror


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

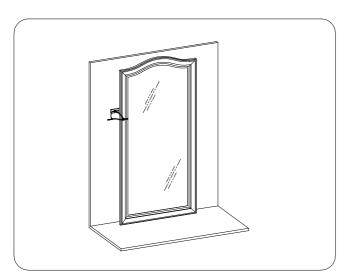

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HAF	RDWARE LIST:		
No.	Description	Sketch	Quantity
A	Wood Screw #4 x 2"	Onume	4 PCS
В	Zip Tie	Δ	2 PCS

CON	APONENTS LIST:		
No.	Description	Sketch	Quantity
1	Mirror		1 PC
2	Wall Cleat	0 2 : .	1 PC

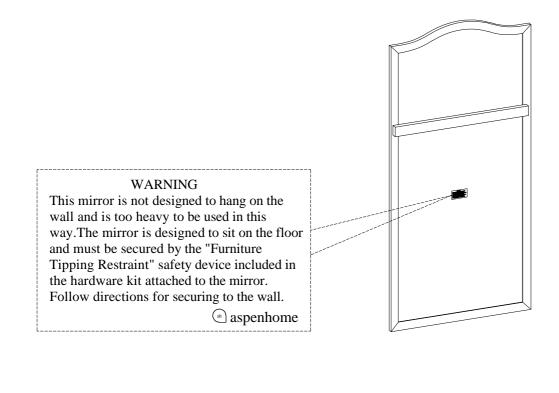

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY

MADE IN VIETNAM



Distributed by Furniture Values International, LLC

ITEM NO: I218-465F-WHT/SHL Floor Mirror

<u>STEP 1:</u> Attach the wall cleat with wood screws to wall at a height 45". Lace the zip ties through the hole in cleats. Confirm that the zip ties are securely laced and locked.

