
## **ASSEMBLY INSTRUCTIONS**

ITEM NO: I222-465F/-465F-LIN Floor Mirror

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.


**WARNING!** Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.

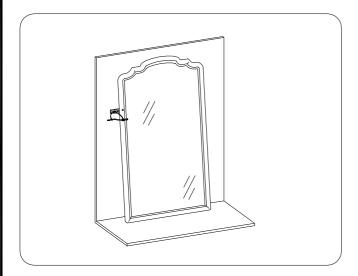

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST:				
No.	Description	Sketch	Quantity	
A	Wood Screw M3.5 x 2"	Ommun>	6 PCS	
В	Zip Tie	2	2 PCS	

COMPONENTS LIST:					
No.	Description	Sketch	Quantity		
1	Mirror		1 PC		
2	Wall Cleat	<b>100</b>	1 PC		

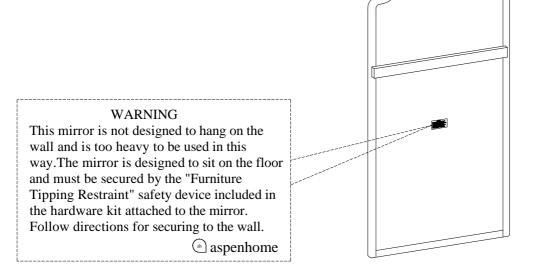

FOR INDOOR USE ONLY



## **ASSEMBLY INSTRUCTIONS**

ITEM NO: I222-465F/-465F-LIN Floor Mirror

<u>STEP 1:</u> Attach the wall cleat with wood screws to wall at a height 45". Lace the zip ties through the hole in cleats. Confirm that the zip ties are securely laced and locked.

