


ASSEMBLY INSTRUCTIONS

ITEM NO: I256-3064 66" Writing Desk

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

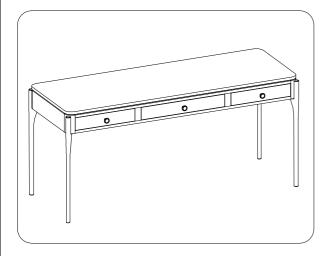


TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

HARDWARE LIST:				
No.	Description	Sketch	Quantity	
A	Bolt Ø1/4" x 1"	0	8 PCS	
В	Bolt Ø1/4" x 2"	9	4 PCS	
С	Lock Washer Ø1/4"	0	12 PCS	
D	Flat Washer Ø1/4" x 3/4"	0	12 PCS	
Е	Allen Wrench 4mm		1 PC	
F	Knob	0	1 PC	
G	Screw Ø5/32" x 1-1/4"	0	1 PC	

COMPONENTS LIST:				
No.	Description	Sketch	Quantity	
1	Desk Top		1 PC	
2	Leg	-	4 PCS	

FUNCTIONALITY INSTRUCTION

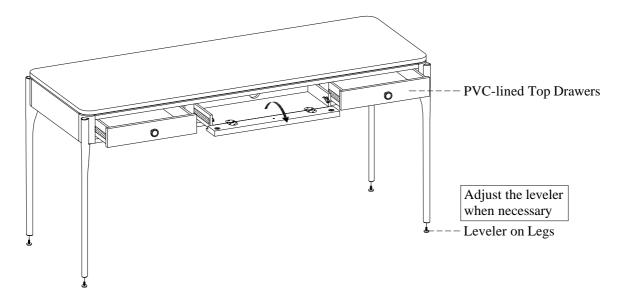

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.


FOR INDOOR USE ONLY



ASSEMBLY INSTRUCTIONS


ITEM NO: I256-3064 66" Writing Desk

<u>STEP 1:</u>Remove the side drawers from the desk top: Fully extend the drawer, then press the plastic tab down on the right and up on the left at the same time as shown below. While holding the tabs pressed down/up, pull the drawer out.

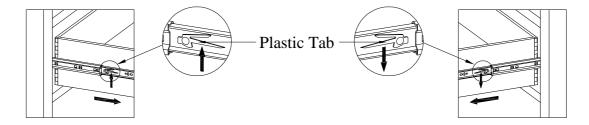


STEP 2: Put the desk top upside down on a soft surface.

STEP 3: Attach the legs to the desk top by using 8 bolts (A), 4 bolts (B), 12 lock washers (C) and 12 flat washers (D). Use the allen wrench (E) to completely tighten all the bolts. Return the desk top to the upright position.

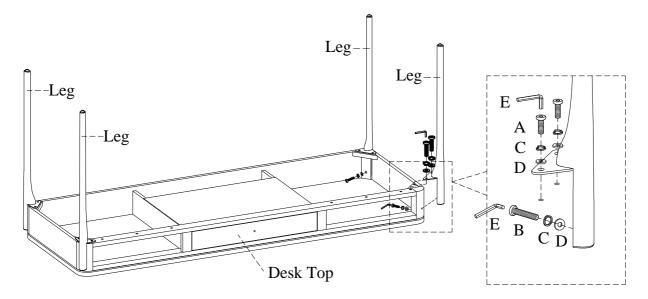

STEP 4: Replace all of the side drawers in desk top: Fully extend the slides from the case. Then align the slides on the drawer to the slides on the case as shown. Push the drawer back in. You may have to slide the drawer in and out several times in order to properly align the ball bearings.

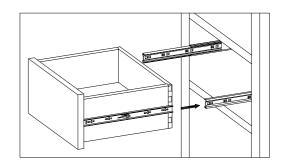



ASSEMBLY INSTRUCTIONS

ITEM NO: I256-3064 66" Writing Desk

<u>STEP 5-1:</u> Reverse each knob on side drawers by removing the screws while each drawer is open and attach all knobs to the front of the side drawers with the screws as shown below.

STEP 5-2: Install the knob (F) to the keyboard drawer front with the screw (G) as shown below.

Note: Please refer with the modular assembly instructions to keep the knob inside either the left or right drawer when this desk is combined with the modular keyboard tray (I256-3030).

