

ITEM NO: ICB-400-KD-1 Queen Sleigh Bed HB

ICB-492-KD-1 Queen Framed Panel HB

ICB-402L-1 Queen Side Rails


ICB-403D-1 Queen LP FB w/Drawers

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.




UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

OPTION 1: Queen Storage Sleigh Bed

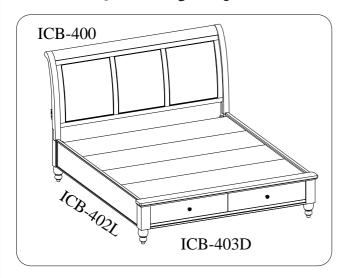

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

OPTION 2: Quee Storage Panel Bed

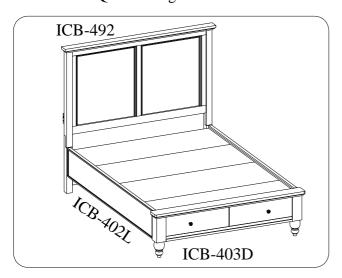

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.



ITEM NO: ICB-400-KD-1 Queen Sleigh Bed HB

ICB-492-KD-1 Queen Framed Panel HB

ICB-402L-1 Queen Side Rails

ICB-403D-1 Queen LP FB w/Drawers

TOOLS REQUIRED (NOT PROVIDED)	
PHILLIPS SCREWDRIVER	

HA	RDWARE LIST: ICB-400		
No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2-1/4"		8 PCS
В	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16"	0	8 PCS
D	Allen Wrench 5mm		1 PC

HA	RDWARE LIST: ICB-402L		
No.	Description	Sketch	Quantity
Е	Wood Screw	Omman.	8 PCS
F	Allen Wrench 4mm		1 PC

HA	HARDWARE LIST: ICB-403D				
No.	Description	Sketch	Quantity		
G	Bolt Ø1/4"*1-3/4"		6 PCS		
Н	Bolt Ø1/4"*1-1/4"		4 PCS		
I	Lock Washer Ø1/4"		10 PCS		
J	Flat washer Ø1/4"		10 PCS		
K	Wood Screw #8*1"	Tunn	8 PCS		
L	Wood Screw #8*1-1/2"	@mmm_	5 PCS		
M	Allen Wrench 4mm		1 PC		

HA	RDWARE LIST: ICB-492		
No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*1-3/4"		8 PCS
В	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16"	0	8 PCS
D	Allen Wrench 5mm		1 PC

COMPONENTS LIST: ICB-400				
No.	Description	Sketch	Quantity	
1	Headboard	皿	1 PC	
2	Left Leg		1 PC	
3	Right Leg	00	1 PC	
4	Wood Stretcher		1 PC	

CO	MPONENTS LIST: ICB-402L		
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		4 PCS

CO	COMPONENTS LIST: ICB-403D				
No.	Description	Sketch	Quantity		
1	Footboard		1 PC		
2	Support Leg (for center rail)		1 PC		
3	Support Leg (for pedestal)		2 PCS		
4	Decking		4 PCS		
5	Center Rail		1 PC		
6	Bun Foot	8	2 PCS		
7	Support Panel	Ē.	2 PCS		

COMPONENTS LIST: ICB-492				
No.	Description	Sketch	Quantity	
1	Headboard	Ш	1 PC	
2	Left Leg	FEL .:	1 PC	
3	Right Leg		1 PC	
4	Wood Stretcher		1 PC	



ITEM NO: ICB-400-KD-1 Queen Sleigh Bed HB


ICB-492-KD-1 Queen Framed Panel HB


ICB-402L-1 Queen Side Rails

ICB-403D-1 Queen LP FB w/Drawers

OPTION 1: Queen Storage Sleigh Bed


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C).

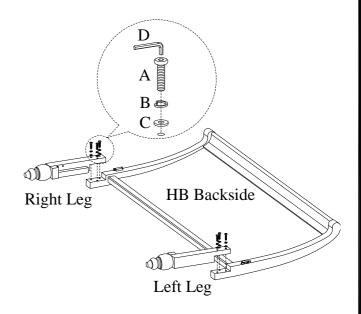

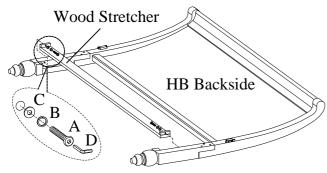

STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(B) and flat washers(C).

STEP 3: Lay footboard upside down on a padded, clean surface. Attach support legs (for pedestal) and bun feet to footboard using 4 bolts(H), lock washers(I) and flat washers(J). Turn footboard right side up.

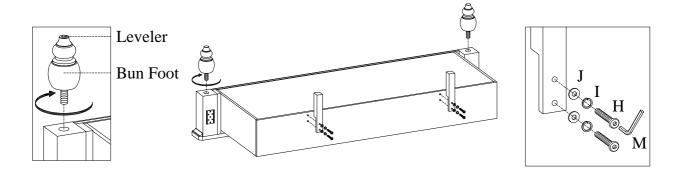




ITEM NO: ICB-400-KD-1 Queen Sleigh Bed HB

ICB-492-KD-1 Queen Framed Panel HB


ICB-402L-1 Queen Side Rails

ICB-403D-1 Queen LP FB w/Drawers

<u>STEP 4:</u> Attach support leg and support panels to center rail by using 6 bolts(G), lock washers(I) and flat washers(J).

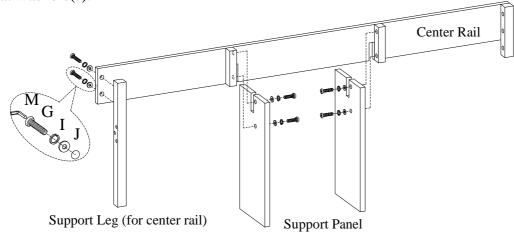

<u>STEP 5:</u> Hook the side rails to the headboard and footboard, Attach support leg and center rail to headboard and footboard by using 5 wood screws(L).

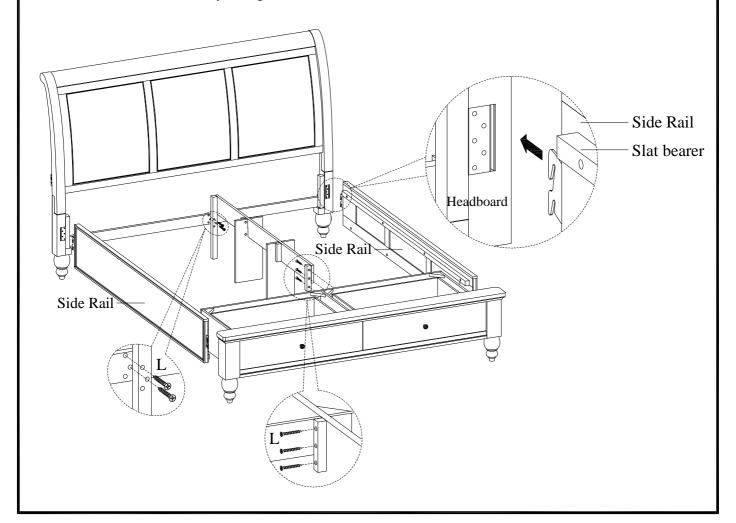


ITEM NO: ICB-400-KD-1 Queen Sleigh Bed HB

ICB-492-KD-1 Queen Framed Panel HB


ICB-402L-1 Queen Side Rails

ICB-403D-1 Queen LP FB w/Drawers

STEP 6: Arrange slats on the slat bearers and then lay decking on top of the slats. Make sure the slats are positioned along the seams of the decking as shown in the detail in STEP 7 under the pre-drilled hole. Remove the decking and attach slats to the slat bearers with wood screws (E).

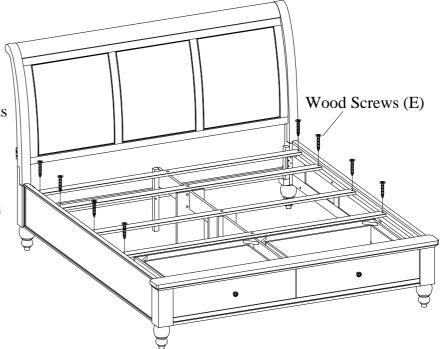

<u>STEP 7:</u> Put the decking over the slats, secure decking to the slats with wood screws (K) through the pre-drilled holes in the decking as shown below.

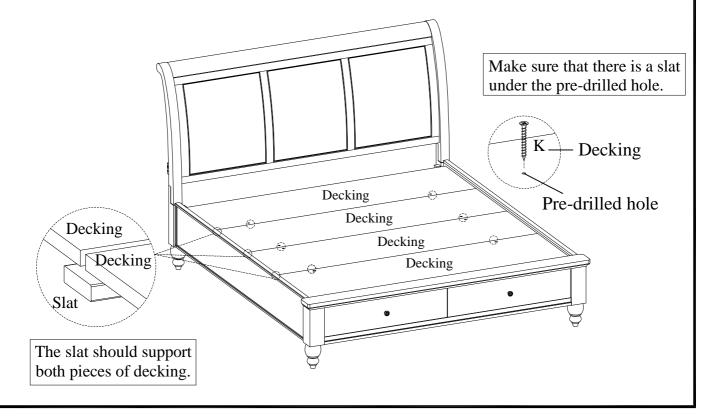



ITEM NO: ICB-400-KD-1 Queen Sleigh Bed HB


ICB-492-KD-1 Queen Framed Panel HB

ICB-402L-1 Queen Side Rails

ICB-403D-1 Queen LP FB w/Drawers

OPTION 2: Queen Storage Panel Bed

<u>STEP 1:</u> Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C).

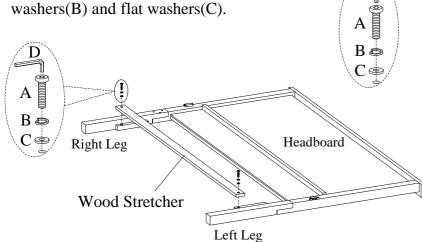


STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(B) and flat washers(C).

Left Leg

Headboard

STEP 3 to STEP 7 are same as OPTION 1

FUNCTIONALITY INSTRUCTION

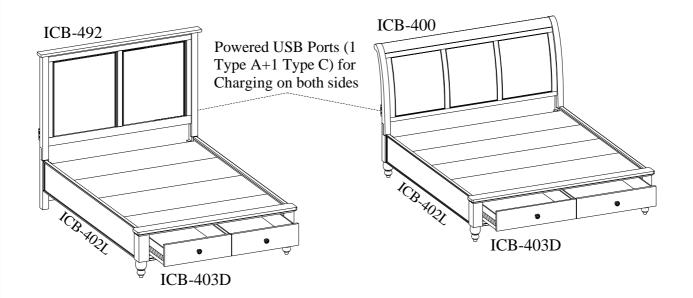

Right Leg

D



ITEM NO: ICB-404-KD-1 King/Cal King Sleigh HB

ICB-495-KD-1 King Framed Panel HB

ICB-406L-1 King Side Rails ICB-410L-1 Cal King Side Rails

ICB-407D-1 King/Cal King LP FB w/Drawers

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.




UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

OPTION 1: King/Cal king Storage Sleigh Bed



All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

OPTION 2: King/Cal King Storage Panel Bed

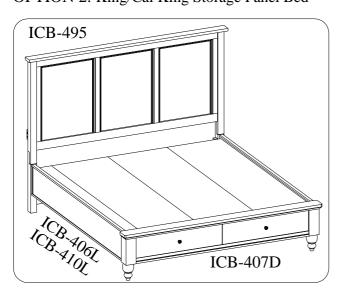

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.



Distributed by Furniture Values International, LLC

ITEM NO: ICB-404-KD-1 King/Cal King Sleigh HB

ICB-495-KD-1 King Framed Panel HB

ICB-406L-1 King Side Rails ICB-410L-1 Cal King Side Rails

ICB-407D-1 King/Cal King LP FB w/Drawers

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER
UTILITY KNIFE (FOR CAL KING)

HA	RDWARE LIST: ICB-404		
No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2-1/4"		8 PCS
В	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16"	0	8 PCS
D	Allen Wrench 5mm		1 PC

HA	HARDWARE LIST: ICB-406L/410L			
No.	Description	Sketch	Quantity	
Е	Wood Screw	Omman.	10 PCS	
F	Allen Wrench 4mm		1 PC	

HA	HARDWARE LIST: ICB-407D				
No.	Description	Sketch	Quantity		
G	Bolt Ø1/4"*1-3/4"		9 PCS		
Н	Bolt Ø1/4"*1-1/4"		4 PCS		
I	Lock Washer Ø1/4"		13 PCS		
J	Flat washer Ø1/4"		13 PCS		
K	Wood Screw #8*1"	Tunn	6 PCS		
L	Wood Screw #8*1-1/2"	Ommuni-	5 PCS		
M	Allen Wrench 4mm		1 PC		

HA	HARDWARE LIST: ICB-495				
No.	Description	Sketch	Quantity		
N	Bolt Ø5/16"*1-3/4"		8 PCS		
О	Lock Washer Ø5/16"		8 PCS		
P	Flat Washer Ø5/16"	0	8 PCS		
Q	Allen Wrench 5mm		1 PC		

COMPONENTS LIST: ICB-404				
No.	Description	Sketch	Quantity	
1	Headboard	皿	1 PC	
2	Left Leg		1 PC	
3	Right Leg	00	1 PC	
4	Wood Stretcher		1 PC	

COMPONENTS LIST: ICB-406L/410L				
No.	Description	Sketch	Quantity	
1	Bed rails		2 PCS	
2	Slats	-	5 PCS	
3	Magnetic Plate(Only for -410L)		4 PCS	

CO	COMPONENTS LIST: ICB-407D			
No.	Description	Sketch	Quantity	
1	Footboard		1 PC	
2	Support Leg (for center rail)		1 PC	
3	Support Leg (for pedestal)		2 PCS	
4	Decking		3 PCS	
5	Center Rail		1 PC	
6	Filler	-	1 PC	
7	Bun Foot	8	2 PCS	
8	Support Panel	E	2 PCS	
9	Rail connector		1 PC	

COMPONENTS LIST: ICB-495					
No.	Description	Sketch	Quantity		
1	Headboard	Ш	1 PC		
2	Left Leg	- F33	1 PC		
3	Right Leg		1 PC		
4	Wood Stretcher		1 PC		



ITEM NO: ICB-404-KD-1 King/Cal King Sleigh HB


ICB-495-KD-1 King Framed Panel HB


ICB-406L-1 King Side Rails ICB-410L-1 Cal King Side Rails

ICB-407D-1 King/Cal King LP FB w/Drawers

OPTION 1: King/Cal king Storage Sleigh Bed


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C).

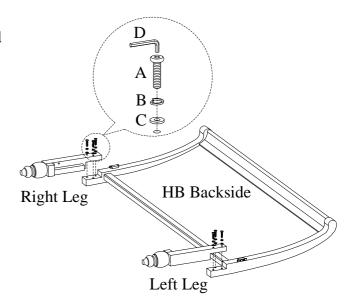

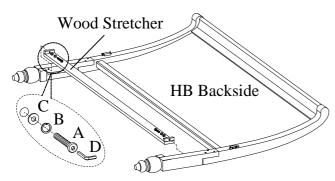

STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(B) and flat washers(C).

STEP 3: Lay footboard upside down on a padded, clean surface. Attach support legs (for pedestal) and bun feet to footboard using 4 bolts(H), lock washers(I) and flat washers(J). Turn footboard right side up.

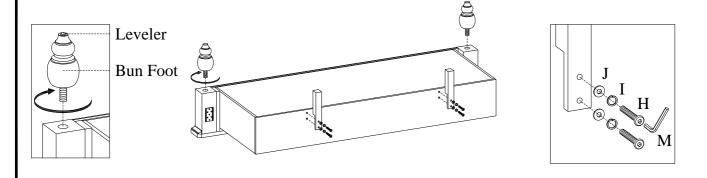




Distributed by Furniture Values International, LLC

ITEM NO: ICB-404-KD-1 King/Cal King Sleigh HB ICB-495-KD-1 King Framed Panel HB


ICB-406L-1 King Side Rails ICB-410L-1 Cal King Side Rails

ICB-407D-1 King/Cal King LP FB w/Drawers

<u>STEP 4:</u> Attach support leg and support panels to center rail by using 6 bolts(G), lock washers(I) and flat washers(J).

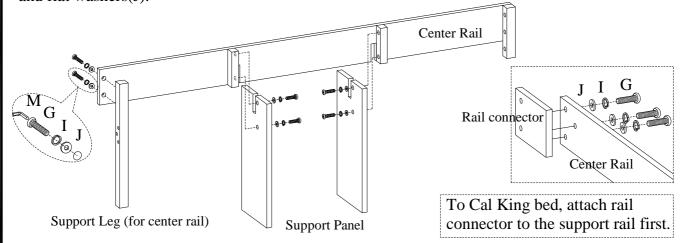

<u>STEP 5:</u> Hook the side rails to the headboard and footboard, Attach support leg and center rail to headboard and footboard by using 5 wood screws(L).

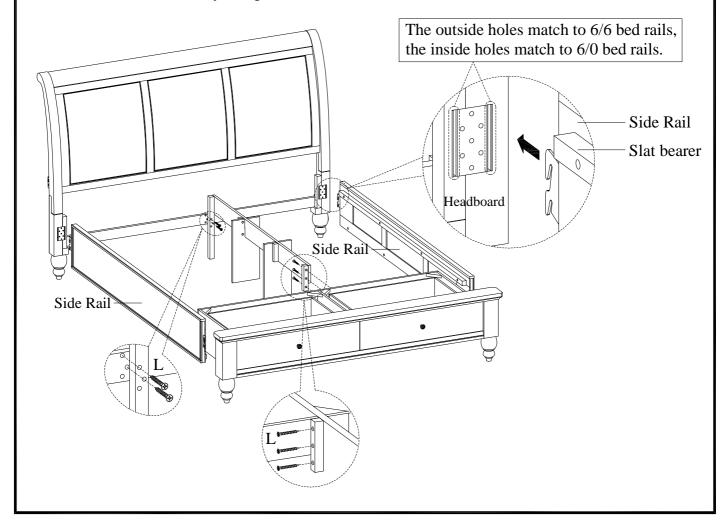



Distributed by Furniture Values International, LLC


ITEM NO: ICB-404-KD-1 King/Cal King Sleigh HB


ICB-495-KD-1 King Framed Panel HB

ICB-406L-1 King Side Rails ICB-410L-1 Cal King Side Rails

ICB-407D-1 King/Cal King LP FB w/Drawers


STEP 6: Arrange slats on the slat bearers and then lay the decking on top of the slats. Make sure the top and bottom slats are situated underneath the pre-drilled holes as shown below in STEP 8. Remove the decking and attach slats to the slat bearers with wood screws (E).

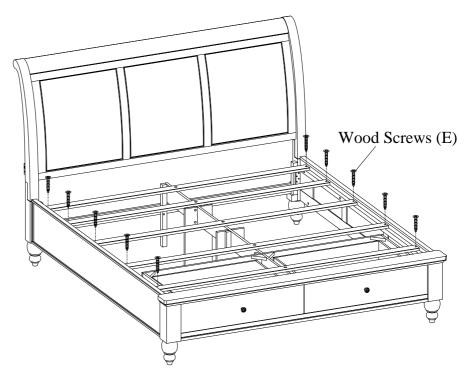



STEP 7: For Cal King bed, use a utility knife to cut off the small piece at the notch on the Decking Filler piece included with the Storage Footboard. For regular King bed, skip this step.

<u>STEP 8:</u> Put the decking over the slats, secure decking to the slats with wood screws (K) through the pre-drilled holes in the decking as shown below.

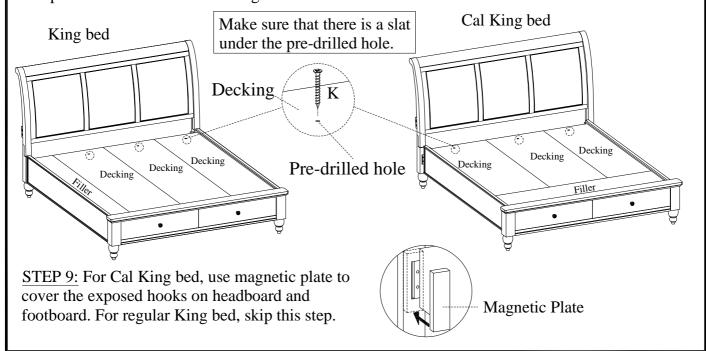



ITEM NO: ICB-404-KD-1 King/Cal King Sleigh HB


ICB-495-KD-1 King Framed Panel HB


ICB-406L-1 King Side Rails ICB-410L-1 Cal King Side Rails

ICB-407D-1 King/Cal King LP FB w/Drawers

OPTION 2: King/Cal king Storage Panel Bed

<u>STEP 1:</u> Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(N), lock washers(O) and flat washers(P).

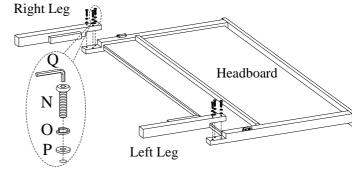

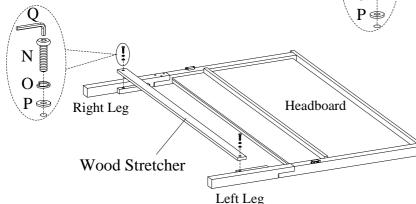



STEP 2: Attach the wood stretcher to the legs by using 2 bolts(N), lock washers(O) and flat washers(P).

STEP 3 to STEP 9 are same as OPTION 1


FUNCTIONALITY INSTRUCTION

OPTION 2:

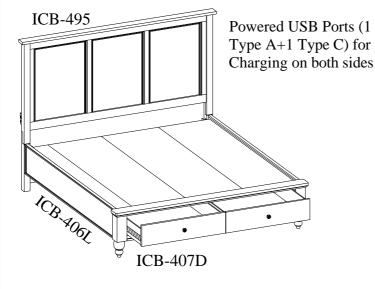

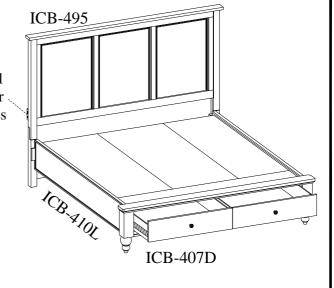



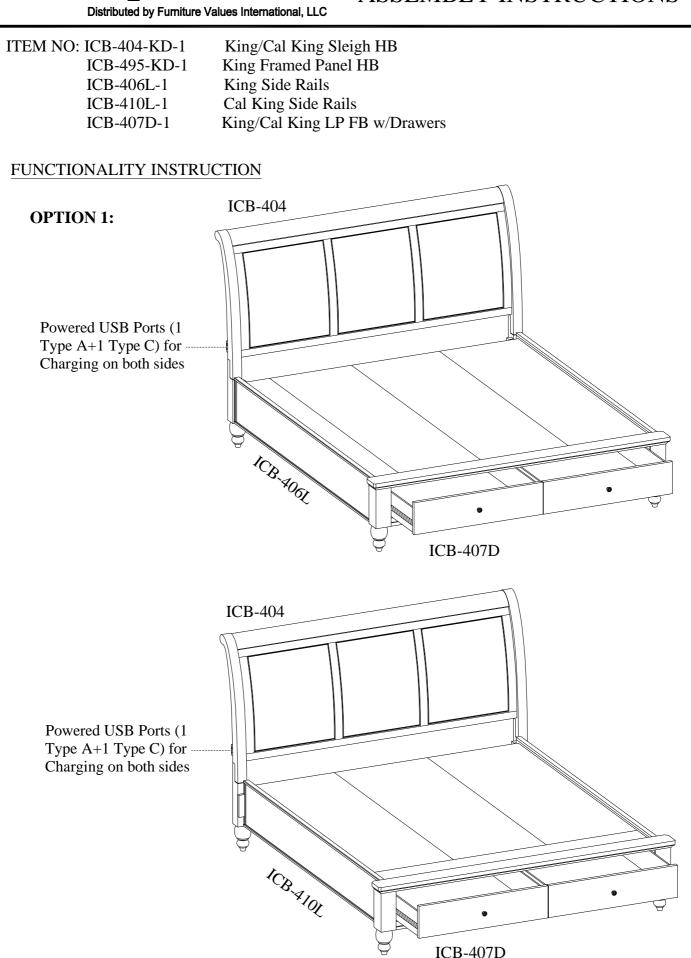




ITEM NO: ICB-492-KD-1 Queen Framed Panel HB

ICB-402L-1 Queen Side Rails ICB-403-1 Queen Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

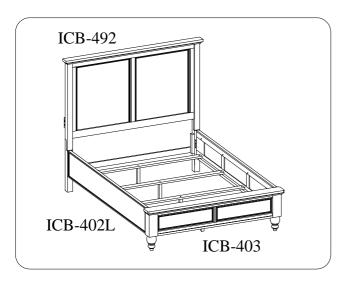

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED) PHILLIPS SCREWDRIVER

HA	HARDWARE LIST: ICB-492				
No.	Description	Sketch	Quantity		
Α	Bolt Ø5/16"*1-3/4"		8 PCS		
В	Lock Washer Ø5/16"		8 PCS		
C	Flat Washer Ø5/16"	0	8 PCS		
D	Allen Wrench 5mm		1 PC		

HA	HARDWARE LIST: ICB-402L				
No.	Description	Sketch	Quantity		
Е	Wood Screw	Dimining.	8 PCS		
F	Allen Wrench 4mm		1 PC		

CO	COMPONENTS LIST: ICB-492				
No.	Description	Sketch	Quantity		
1	Headboard		1 PC		
2	Left Leg		1 PC		
3	Right Leg		1 PC		
4	Wood Stretcher		1 PC		

COMPONENTS LIST: ICB-402L				
No.	Description	Sketch	Quantity	
1	Bed rails		2 PCS	
2	Slats		4 PCS	

COMPONENTS LIST: ICB-403				
No.	Description	Sketch	Quantity	
1	Footboard		1 PC	
2	Bun Foot	\$	2 PCS	
3	Support legs with leveler	0 (4 PCS	


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.




ITEM NO: ICB-492-KD-1 Queen Framed Panel HB

ICB-402L-1 Queen Side Rails ICB-403-1 Queen Low Profile FB


<u>STEP 1:</u> Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C).

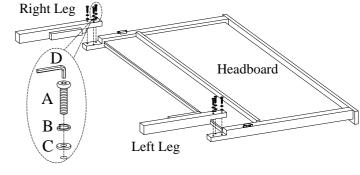

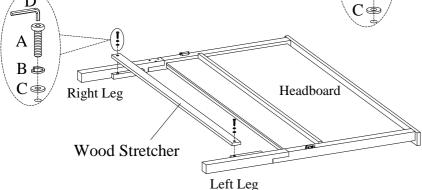


STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(B) and flat washers(C).

<u>STEP 3:</u> Lay footboard back down on a padded, clean surface. Attach bun feet to footboard. Turn footboard right side up.

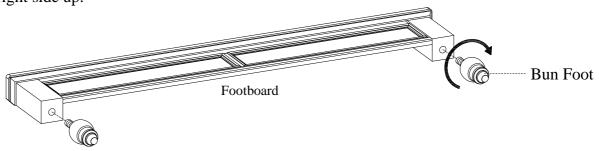

<u>STEP 4:</u> The slat bearers have been attached in position b. The slat bearers can be moved into position a depending on the mattress/platform configuration. Remove the bolts and screws from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in desired position with bolts, lock washers, flat washers, and screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

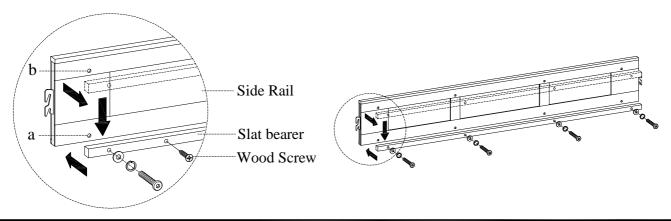





ITEM NO: ICB-492-KD-1 Queen Framed Panel HB


ICB-402L-1 Queen Side Rails ICB-403-1 Queen Low Profile FB

STEP 5: Hook the side rails to the headboard and footboard.

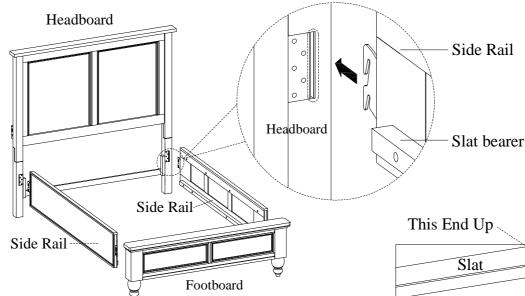


<u>STEP 6:</u> Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

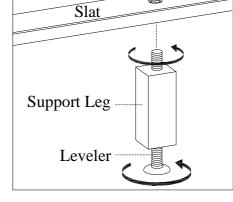

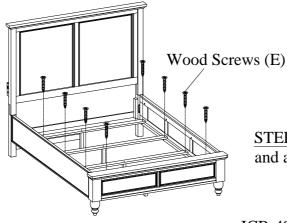

<u>STEP 7:</u> Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (E).

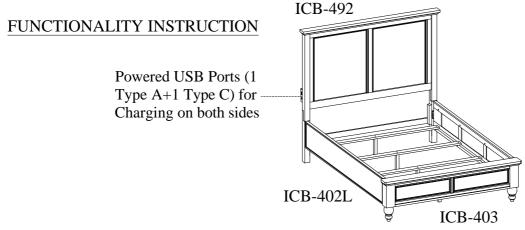




ITEM NO: ICB-495-KD-1 King Framed Panel HB

ICB-406L-1 King Side Rails ICB-410L-1 Cal King Side Rails ICB-407-1 King Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

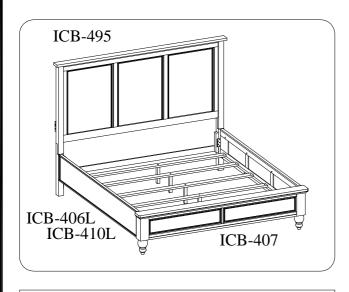

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED) PHILLIPS SCREWDRIVER

НА	HARDWARE LIST: ICB-495				
No.	Description	Sketch	Quantity		
A	Bolt Ø5/16"*1-3/4"		8 PCS		
В	Lock Washer Ø5/16"		8 PCS		
C	Flat Washer Ø5/16"	0	8 PCS		
D	Allen Wrench 5mm		1 PC		

HARDWARE LIST: ICB-406L/410L				
No.	Description	Sketch	Quantity	
Е	Wood Screw	Omman.	10 PCS	
F	Allen Wrench 4mm		1 PC	

COMPONENTS LIST: ICB-495					
No.	Description	Sketch	Quantity		
1	Headboard	Ш	1 PC		
2	Left Leg	<u>83</u>	1 PC		
3	Right Leg		1 PC		
4	Wood Stretcher		1 PC		

COMPONENTS LIST: ICB-406L/410L				
No.	Description	Sketch	Quantity	
1	Bed rails		2 PCS	
2	Slats		5 PCS	
3	Magnetic Plate(Only for -410L)		4 PCS	

COMPONENTS LIST: ICB-407				
No.	Description	Sketch	Quantity	
1	Footboard		1 PC	
2	Bun Foot	\$	2 PCS	
3	Support legs with leveler	(5 PCS	


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.



ITEM NO: ICB-495-KD-1 King Framed Panel HB

ICB-406L-1 King Side Rails ICB-410L-1 Cal King Side Rails ICB-407-1 King Low Profile FB

<u>STEP 1:</u> Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C).

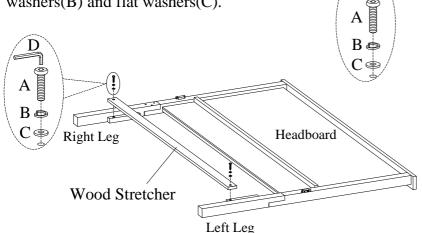

STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(B) and flat washers(C).


Left Leg

Headboard


STEP 3: Lay footboard back down on a padded, clean surface. Attach bun feet to footboard. Turn footboard right side up.

Right Leg

D

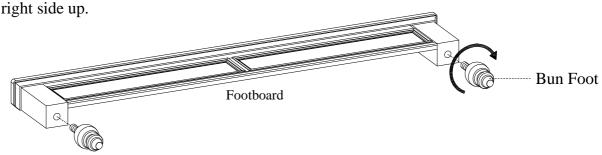

<u>STEP 4:</u> The slat bearers have been attached in position b. The slat bearers can be moved into position a depending on the mattress/platform configuration. Remove the bolts and screws from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in desired position with bolts, lock washers, flat washers, and screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

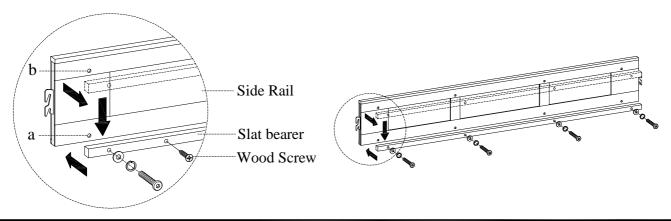




ITEM NO: ICB-495-KD-1 King Framed Panel HB

ICB-406L-1 King Side Rails ICB-410L-1 Cal King Side Rails ICB-407-1 King Low Profile FB


STEP 5: Hook the side rails to the headboard and footboard.

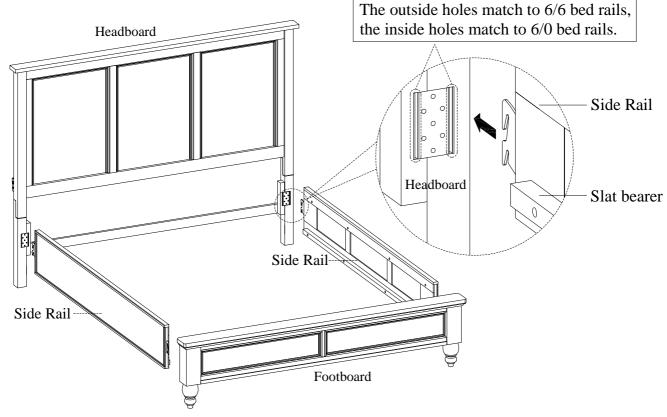

<u>STEP 6:</u> For Cal King bed, use magnetic plate to cover the exposed hooks on headboard and footboard. For regular King bed, skip this step.



STEP 7: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

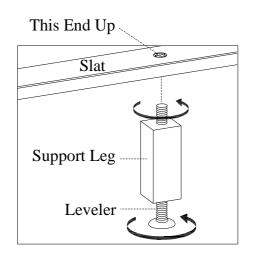




ITEM NO: ICB-495-KD-1 King Framed Panel HB

ICB-406L-1 King Side Rails ICB-410L-1 Cal King Side Rails ICB-407-1 King Low Profile FB

<u>STEP 8:</u> Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (E).

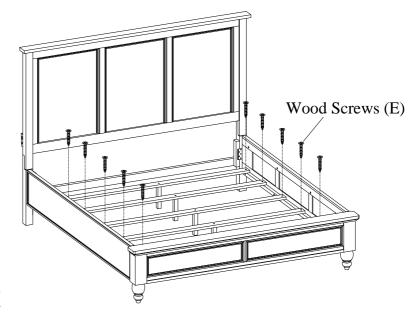

FUNCTIONALITY INSTRUCTION

