


ITEM NO: I287-412	
I287-402	
I287-403	

Queen Panel HB Queen Rails Queen Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

 \mathbb{V} UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

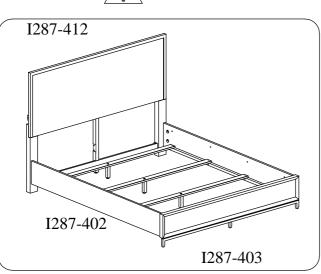

A Bolt Ø5/16" x 1-3/4" ()	
	antity
B Lock Washer Ø5/16" 🔊 12	PCS
	PCS
C Flat Washer Ø5/16" x 3/4" (©) 12	PCS
D Allen Wrench 5mm	DC

HARDWARE LIST: I287-402No.DescriptionE.Hanger Bolt Ø5/16" x 3-1/2"

	$\begin{array}{c} \text{Tranger Don } 05/10 \text{x } 5^{-1/2} \end{array}$	California	0105
F	Half Moon Washer Ø5/16"	0	8 PCS
G	Lock Washer Ø5/16"	Q	8 PCS
Η	Hex Nut Ø5/16"	Ð	8 PCS
Ι	Hex Wrench 12mm	J	1 PC
J	Wood Screw #8 x 1-1/4"	Janana	8 PCS

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg	1	1 PC

CON	APOINEINIS LISI: 1287-402		
No.	Description	Sketch	Quantity
1	Bed rail		2 PCS
2	Slat		4 PCS

CON	APONENTS LIST: I287-403		
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for slat)	∞	4 PCS

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

Quantity

8 PCS


FOR INDOOR USE ONLY

MADE IN VIETNAM




ITEM NO: I287-412	
I287-402	
I287-403	


Queen Panel HB Queen Rails Queen Low Profile FB

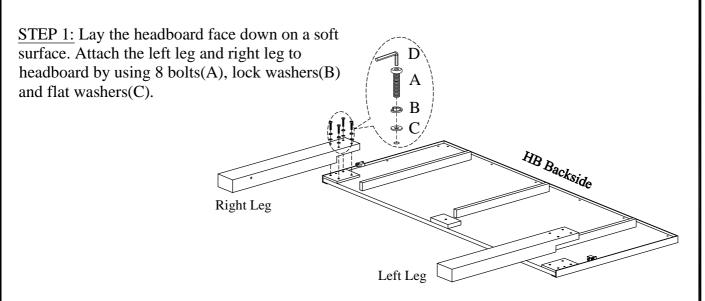

STEP 2: Attach the wood stretcher to left leg and right leg by using 2 bolts(A), lock washers(B) and flat washers(C).

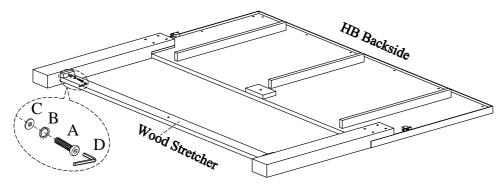

STEP 3: Attach the center support leg to headboard and wood stretcher by using 2 bolts(A), lock washers(B) and flat washers(C).

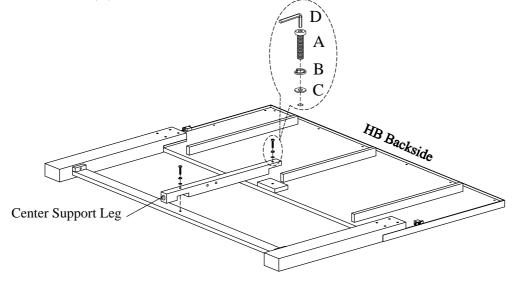




aspenhome _© Distributed by Furniture Values International, LLC

ITEM NO: I287-412 I287-402 I287-403


ah

Queen Panel HB Queen Rails Queen Low Profile FB

<u>STEP 4:</u> The slat bearers have been attached in position (b) approximately 2" from the top of the side rails for use with a storage footboard. The slat bearers must be moved into position (a) based on this bed configuration. Remove the bolts and screws from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in position (a) with bolts, lock washers, flat washers, and screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails**.

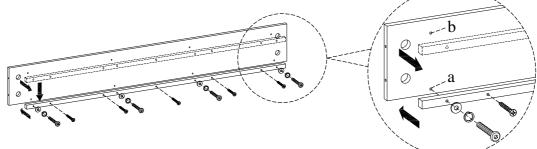

STEP 5: Screw the bolts(E) into HB & FB. Make sure the slat bearer is in the position (a). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washer(F), lock washers(G) and nuts (H). Then use a hex wrench to tighten all the nuts.

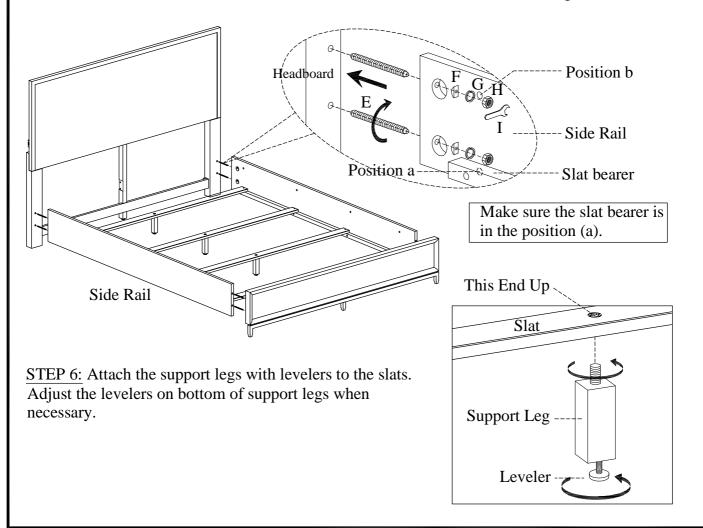





ITEM NO: I287-412	
I287-402	
I287-403	

Queen Panel HB Queen Rails Queen Low Profile FB

STEP 7: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (J).

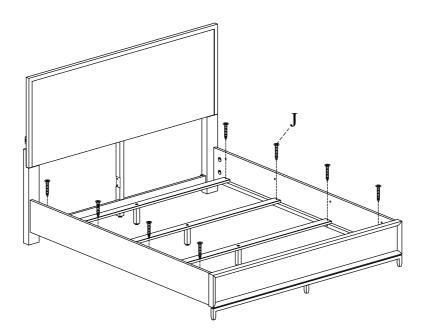

FUNCTIONALITY INSTRUCTION

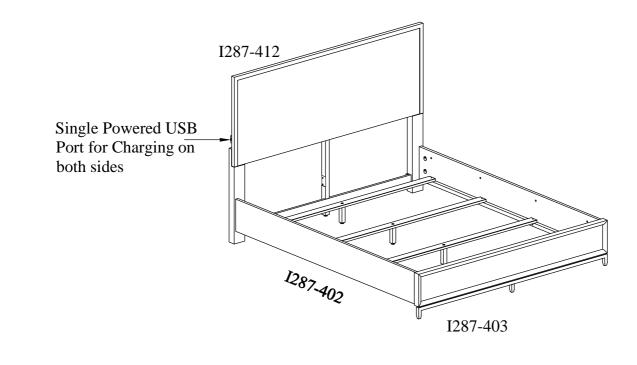



ITEM NO: I287-412	
I287-402	
I287-403D	

Queen Panel HB Queen Rails Queen Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS. I287-412

I287-402 I287-403D

HARDWARE LIST: I287-412			
No.	Description	Sketch	Quantity
Α	Bolt Ø5/16" x 1-3/4"		12 PCS
В	Lock Washer Ø5/16"	Ð	12 PCS
C	Flat Washer Ø5/16" x 3/4"	0	12 PCS
D	Allen Wrench 5mm		1 PC
HARDWARE LIST: I287-402			

No.	Description	Sketch	Quantity
E	Hanger Bolt Ø5/16" x 3-1/2"		8 PCS
F	Half Moon Washer 5/16"	0	8 PCS
G	Lock Washer Ø5/16"	0	8 PCS
Н	Hex Nut Ø5/16" x 1/2"	Ð	8 PCS
Ι	Hex Wrench 12mm		1 PC
J	Wood Screw #8 x 1-1/4"	ODDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDD	8 PCS

HARDWARE LIST: I287-403D Description Sketch No.

K	Bolt Ø1/4" x 1-1/4"		8 PCS
L	Bolt Ø1/4" x 1"	000000	4 PCS
Μ	Lock Washer Ø1/4"	Ø	12 PCS
N	Flat Washer Ø1/4" x 3/4"	0	12 PCS
0	Allen Wrench 4mm		1 PC
Р	Wood Screw #8 x 1-1/4"	Barrows	8 PCS

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

COMPONENTS LIST: I287-412 Description Quantity Sketch No. 1 PC 1 Headboard \square 1 PC 2 Left Leg 1 PC 3 Right Leg 4 Wood Stretcher 1 PC 1 PC 5 Center Support Leg

COMPONENTS LIST: I287-402

No.	Description	Sketch	Quantity
1	Bed rail		2 PCS
2	Slat		4 PCS

COMPONENTS LIST: I287-403D


No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Metal Base		1 PC
3	Support Leg (for footboard)	•	2 PCS
4	Support Leg (for center rail)		2 PCS
5	Decking	\square	4 PCS
6	Center rail		1 PC

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.


Quantity

FOR INDOOR USE ONLY







ITEM NO: I287-412	Queen Panel HB
I287-402	Queen Rails
I287-403D	Queen Storage FB

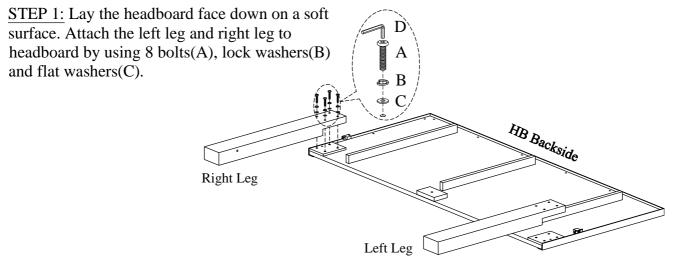

STEP 2: Attach the wood stretcher to left leg and right leg by using 2 bolts(A), lock washers(B) and flat washers(C).

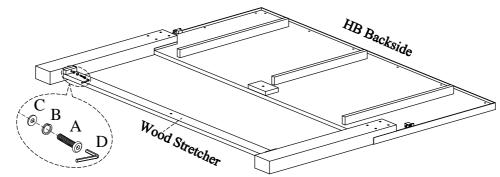


<u>STEP 3:</u> Attach the center support leg to headboard and wood stretcher by using 2 bolts(A), lock washers(B) and flat washers(C).

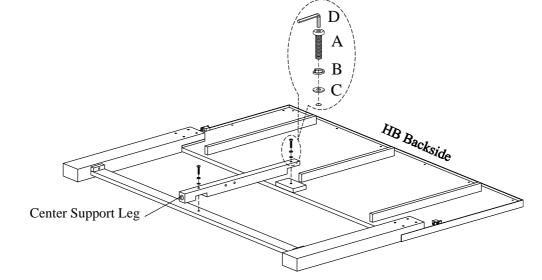




ITEM NO: I287-412	Queen Panel HB
I287-402	Queen Rails
I287-403D	Queen Storage FB

<u>STEP 4:</u> Put the footboard upside down on a padded, clean surface. Attach the support legs(for footboard) and the metal base to footboard by using 4 bolts(L), lock washers(M) and flat washers(N).

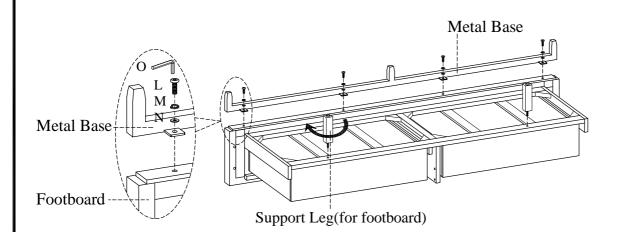

STEP 5: Screw the bolts(E) into HB & FB. Make sure the slat bearer is in the position (b). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers(F), lock washers(G) and nuts (H). Then use a hex wrench to tighten all the nuts.

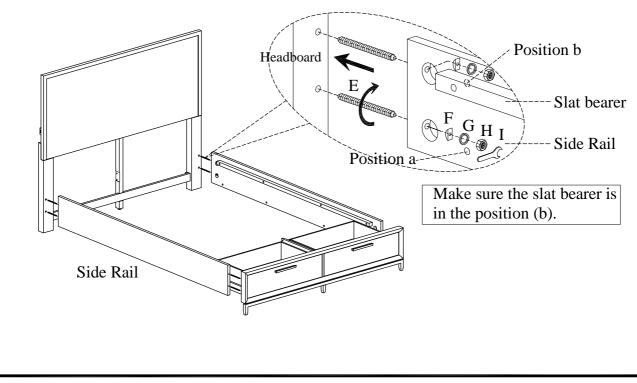





ITEM NO: I287-412	Q
I287-402	Ç
I287-403D	Q

Queen Panel HB Queen Rails Queen Storage FB

<u>STEP 6:</u> Attach center rail to the footboard and center support leg of headboard using 4 bolts(K), lock washers(M) and flat washers(N).

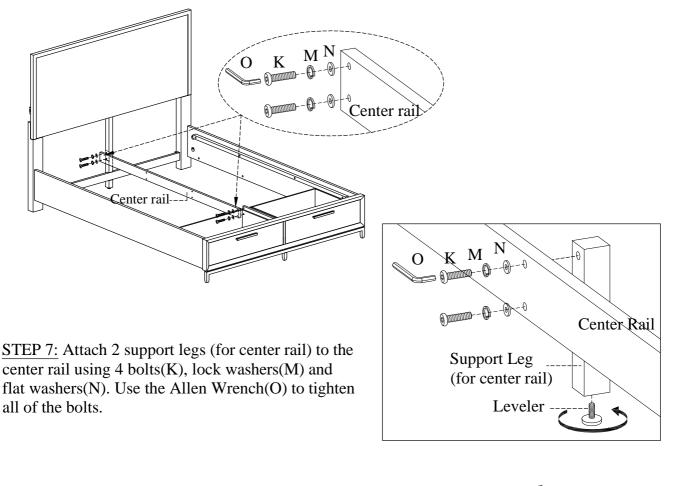

STEP 8: Arrange slats on the slat bearers and then lay decking on top of the slats. Make sure the slats are positioned along the seams of the decking as shown in the detail in STEP 9 under the pre-drilled hole. Remove the decking and attach slats to the slat bearers with wood screws (J).

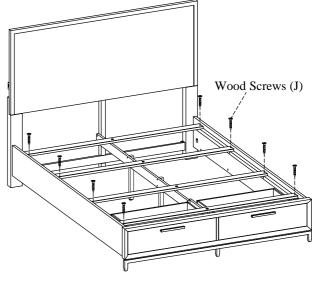




ITEM NO: I287-412	Qu
I287-402	Qu
I287-403D	Qu

Queen Panel HB Queen Rails Queen Storage FB

<u>STEP 9:</u> Put the deckings over the slats, secure deckings to the slats with wood screws (P) through the pre-drilled holes in the deckings as shown below.

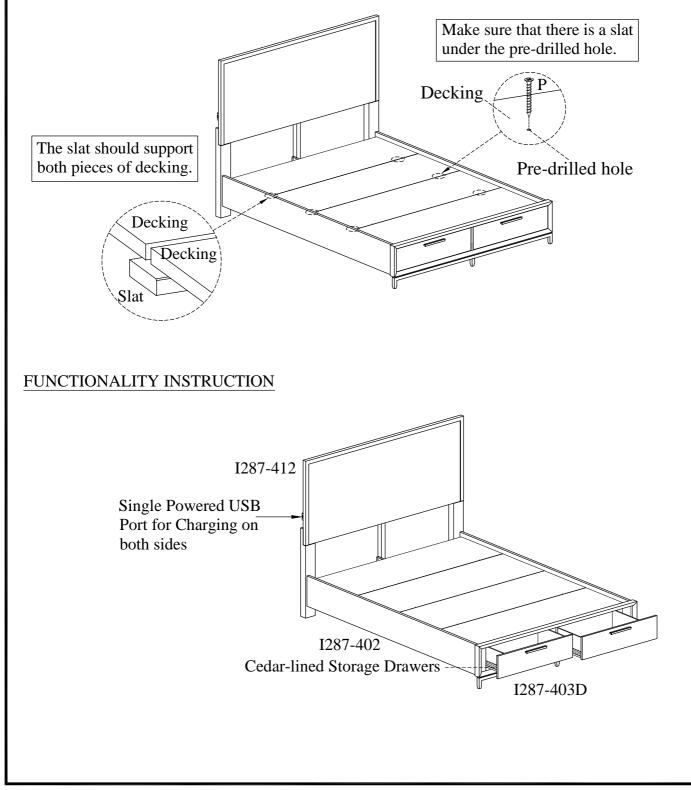



ASSEMBLY INSTRUCTIONS

Distributed by Furniture Values International, LLC

ITEM NO: I287-415	ŀ
I287-406]
I287-410	(
I287-407]

HARDWARE LIST: I287-415 Description

Bolt Ø5/16" x 1-3/4"

Lock Washer Ø5/16"

Allen Wrench 5mm

Flat Washer Ø5/16" x 3/4"

HARDWARE LIST: I287-406/410 Description

Hanger Bolt Ø5/16" x 3-1/2"

Half Moon Washer Ø5/16"

Lock Washer Ø5/16"

Hex Wrench 12mm

Wood Screw #8 x 1-1/4"

Wood Cap (only for 410)

Hex Nut Ø5/16"

No.

А В

С

D

No.

E

F

G

Η

I

J

Κ

King Panel HB King Rails Cal King Rails King Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

Quantity

12 PCS

12 PCS

12 PCS

1 PC

Quantity

8 PCS

8 PCS

8 PCS

8 PCS

1 PC

10 PCS

8 PCS

Sketch

Ð

0

Sketch

D


D

6

Canada Ca

 \mathbb{O}

UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

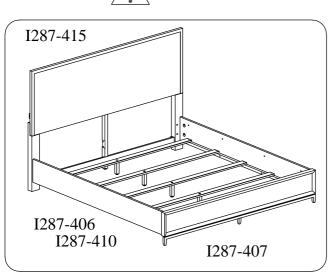

location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

All Beds need to be set up in the exact final

TOOLS REQUIRED (NOT PROVIDED)	
PHILLIPS SCREWDRIVER	

CON	APONENTS LIST: I287-415		
No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg	Color P	1 PC
COMPONENTS LIST: I287-406			
No.	Description	Sketch	Quantity
1	Bed rail		2 PCS
2	Slat		5 PCS
COMPONENTS LIST: I287-410			
No.	Description	Sketch	Quantity
1	Bed rail		2 PCS
2	Slat		5 PCS
3	Center rail (Long)		1 PC
COMPONENTS LIST: I287-407			
No.	Description	Sketch	Quantity
1	Footboard		1 PC

Support Leg (for slat)


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY


MADE IN VIETNAM

5 PCS


¢€

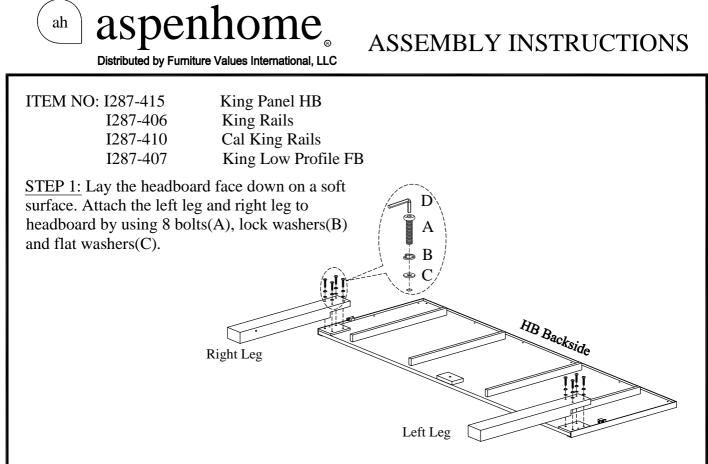

<u>STEP 2</u>: Attach the wood stretcher to left leg and right leg by using 2 bolts(A), lock washers(B) and flat washers(C).

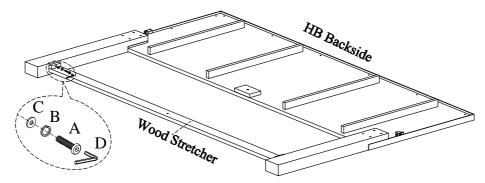

STEP 3: Attach the center support leg to headboard and wood stretcher by using 2 bolts(A), lock washers(B) and flat washers(C).

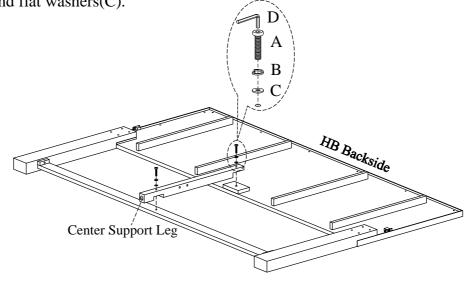




aspenhome

Distributed by Furniture Values International, LLC


ITEM NO: I287-415	King
I287-406	Kin
I287-410	Cal
I287-407	Kin

King Panel HB King Rails Cal King Rails King Low Profile FB

<u>STEP 4:</u> The slat bearers have been attached in position (b) approximately 2" from the top of the side rails for use with a storage footboard. The slat bearers must be moved into position (a) based on this bed configuration. Remove the bolts and screws from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in position (a) with bolts, lock washers, flat washers, and screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails**.

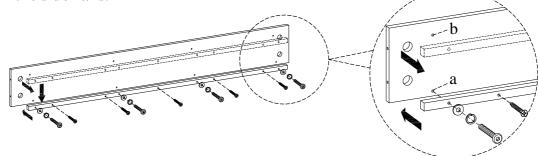


<u>STEP 5:</u> Screw the bolts(E) into HB & FB. Make sure the slat bearer is in the position (a). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washer(F), lock washers(G) and nuts (H). Then use a hex wrench to tighten all the nuts.

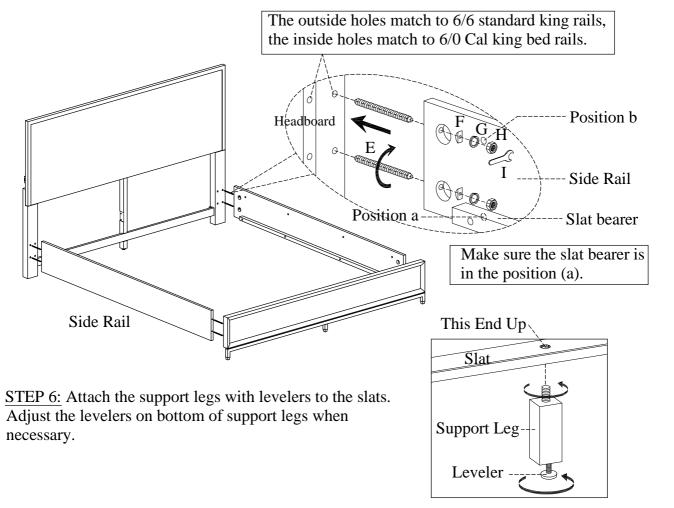




ITEM NO: I287-415	King Panel HB
I287-406	King Rails
I287-410	Cal King Rails
I287-407	King Low Profile FB

<u>STEP 7:</u> Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (J).

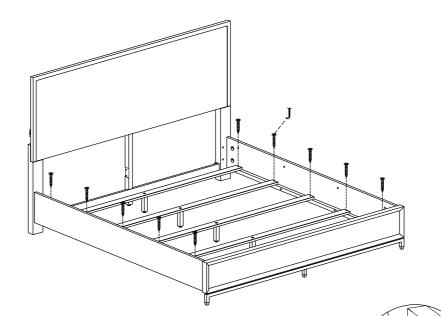

<u>STEP 8:</u> For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

FUNCTIONALITY INSTRUCTION

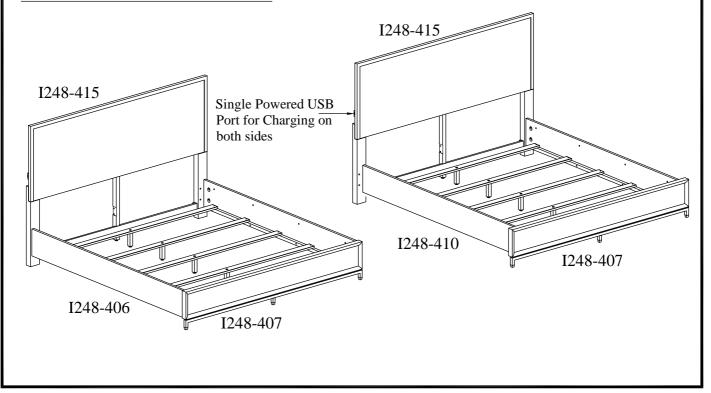



ITEM NO: I287-415	King Panel HB
I287-406	King Rails
I287-410	Cal King Rails
I287-407D	King Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS. I287-415 1287-406 I287-410 I287-407D HARDWARE LIST: I287-415 No. Description Sketch Quantity A | Bolt Ø5/16" x 1-3/4" 12 PCS Ð Lock Washer Ø5/16" 12 PCS В Flat Washer Ø5/16" x 3/4" 0 С 12 PCS D Allen Wrench 5mm 1 PC HARDWARE LIST: I287-406/410 Description Sketch Quantity No. E |Hanger Bolt Ø5/16" x 3-1/2" 8 PCS Half Moon Washer Ø5/16" 9 8 PCS F Ð G Lock Washer Ø5/16" 8 PCS H Hex Nut Ø5/16" ۲ 8 PCS Hex Wrench 12mm I 1 PC COULDED -Wood Screw #8 x 1-1/4" 10 PCS J K Wood Cap (only for 410) 0 8 PCS HARDWARE LIST: I287-407D Description No. Sketch Quantity 000000 Bolt Ø1/4" x 1-1/4" 8 PCS L 0 M Bolt Ø1/4" x 1" 6 PCS Lock Washer Ø1/4" D Ν 14 PCS Flat Washer Ø1/4" X 3/4" 0 14 PCS 0

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)	
PHILLIPS SCREWDRIVER	

COMPONENTS LIST: I287-415			
No.	Description	Sketch	Quantity
1	Headboard	\Box	1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC
COMPONENTS LIST: I287-406			
No.	Description	Sketch	Quantity
1	Bed rail		2 PCS
2	Slat		5 PCS
COMPONENTS LIST: I287-410			
No.	Description	Sketch	Quantity
1	Bed rail		2 PCS
2	Slat		5 PCS
3	Center rail (Long)		1 PC
COMPONENTS LIST: I287-407D			
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Metal Base		1 PC
3	Support Leg (for footboard)	•	2 PCS
4	Support Leg (for center rail)		2 PCS
5	Decking	\Box	3 PCS
6	Center rail (Short)		1 PC
7	Filler		2 PCS

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

1 PC

6 PCS

Ammont

FOR INDOOR USE ONLY


Ρ

0


Allen Wrench 4mm

Wood Screw #8 x 1-1/4"




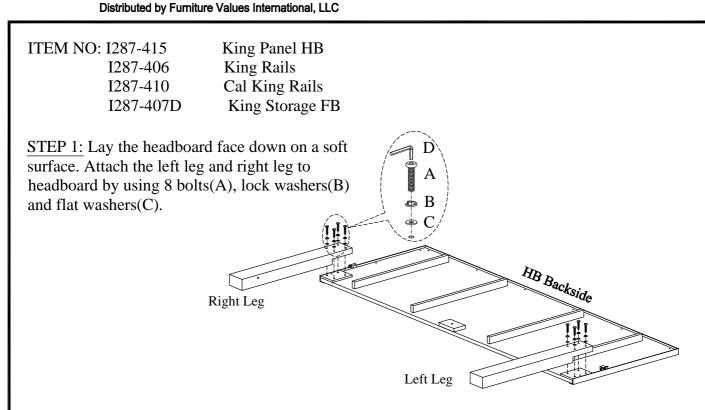

<u>STEP 2:</u> Attach the wood stretcher to left leg and right leg by using 2 bolts(A), lock washers(B) and flat washers(C).

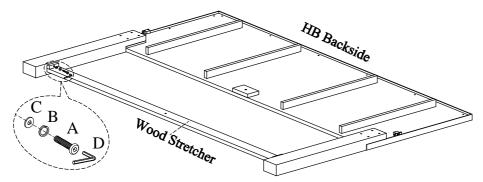


STEP 3: Attach the center support leg to headboard and wood stretcher by using 2 bolts(A), lock washers(B) and flat washers(C).

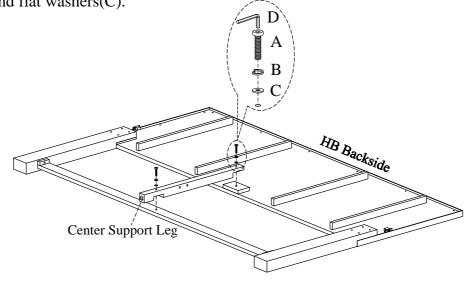




King Panel HB
King Rails
Cal King Rails
King Storage FB

<u>STEP 4:</u> Put the footboard upside down on a padded, clean surface. Attach the support legs(for footboard) and the metal base to footboard by using 6 bolts(M), lock washers(N) and flat washers(O).

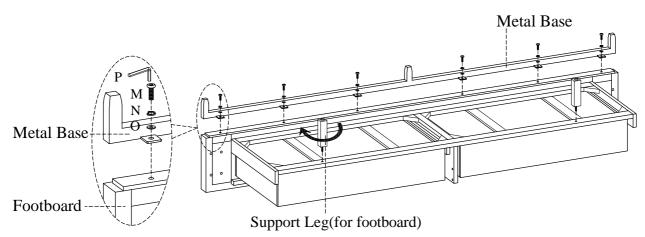


STEP 5: Screw the bolts(E) into HB & FB. Make sure the slat bearer is in the position (b). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers(F), lock washersG) and nuts (H). Then use a hex wrench to tighten all the nuts.

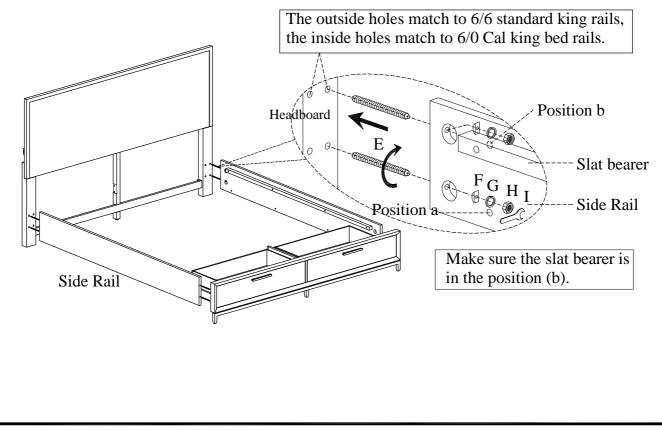



ITEM NO: I287-415	King Panel HB
I287-406	King Rails
I287-410	Cal King Rails
I287-407D	King Storage FB


<u>STEP 6:</u> The standard king center rail(short) is in the Storage Footboard carton, and the Cal king center rail (long) is in the Cal King side rail carton. Attach the appropriate center rail to the footboard and center support leg of headboard using 4 bolts(L), lock washers(N) and flat

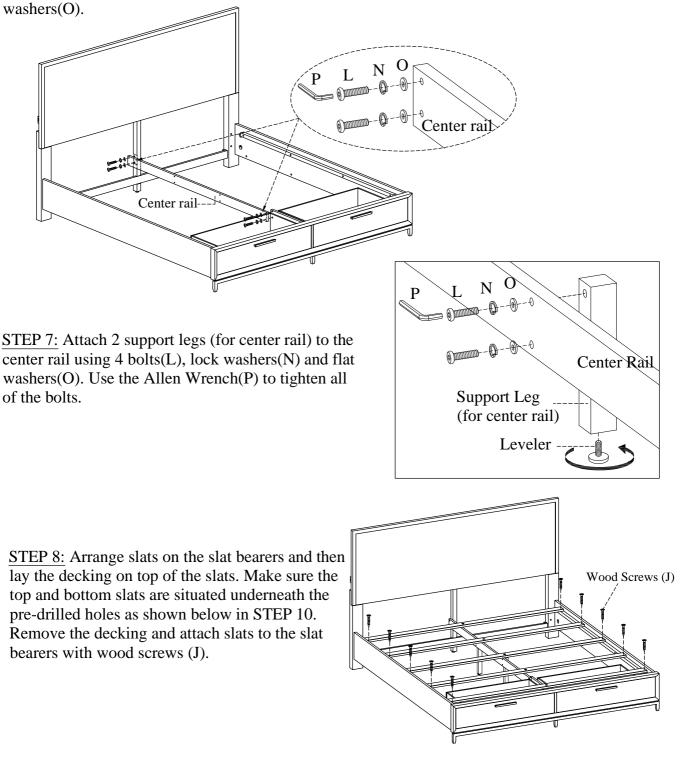




ITEM NO: I287-415	King Panel HB
I287-406	King Rails
I287-410	Cal King Rails
I287-407D	King Storage FB

<u>STEP 9:</u> For the Cal King bed, both filer boards are notched. Using a utility knife only cut off the small piece at the notch on one of the filler boards. This cut off filler board will be placed at the foot of the bed going from left to right as shown on the right side below in STEP 10. For the standard King bed, skip this step and arrange the decking boards as shown below.



<u>STEP 10:</u> Put the deckings and fillers over the slats, secure deckings to the slats with wood screws (Q) through the pre-drilled holes in the deckings as shown below.

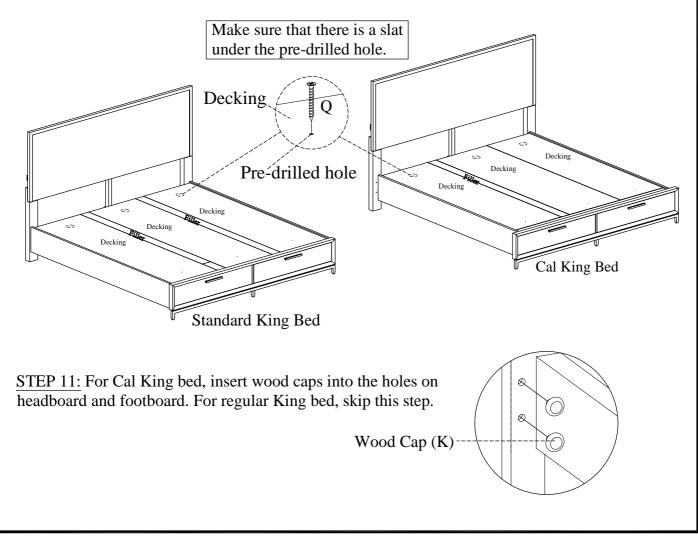



ITEM NO: I287-415	King Panel HB
I287-406	King Rails
I287-410	Cal King Rails
I287-407D	King Storage FB

FUNCTIONALITY INSTRUCTION

